
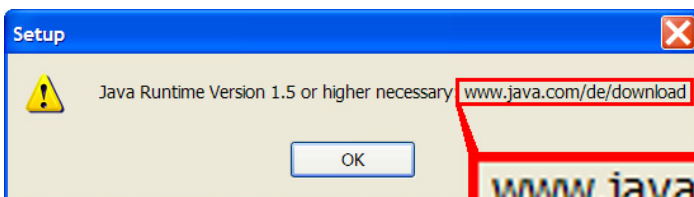
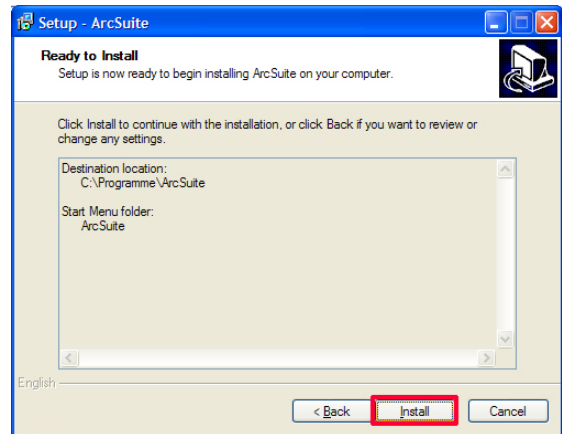
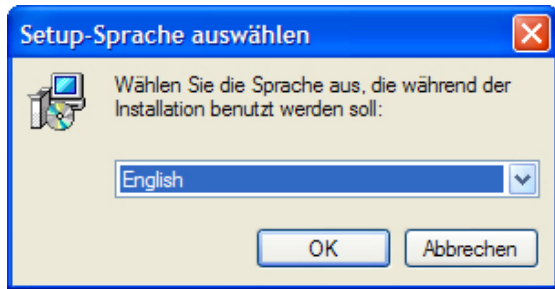
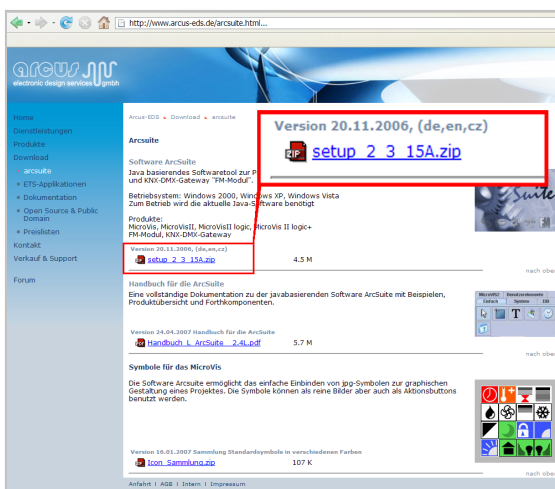


Installation ArcSuite



➤ Download der ArcSuite:

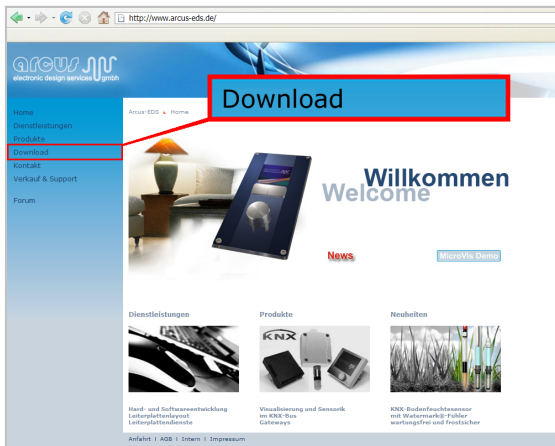

www.java.com/de/download

Installation ArcSuite

➤ Driverinstallation MicroVis (automatic):

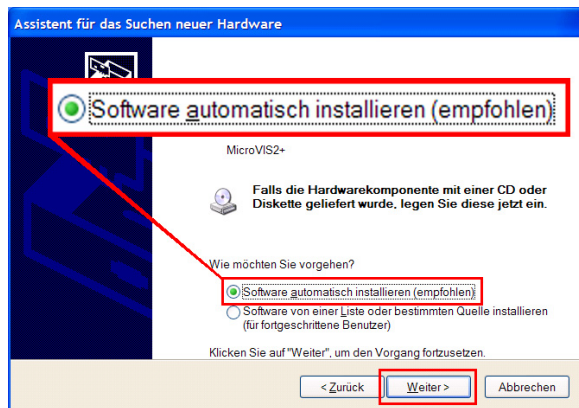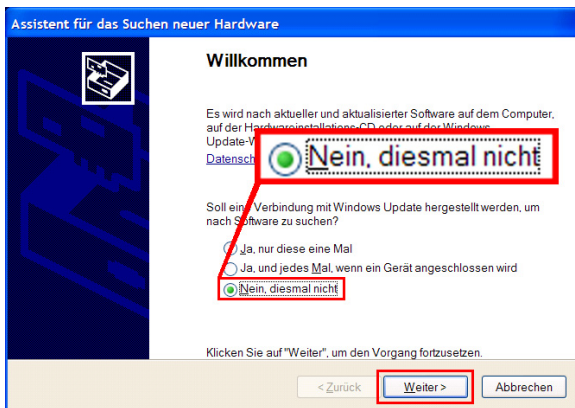

▶ C:\Programme\ArcSuite\microvis\driver

