# B.E.G. LUXOMAT® PD4-M-2C/PD4-S

## Installation and Operating Instruction for B.E.G. - Occupancy detector PD4-M-2C-SM/FC/FM

#### 1. Mounting preparation

Work on the 230 V mains supply may only be carried out by qualified professionals or by instructed persons under the direction and supervision of qualified skilled electrical personnel in accordance with electrical regulations.

#### Disconnect supply before installing!

When in Master/Slave mode of operation, the Master-appliance must always be installed at the location where there is least daylight.

# 2a. Installation LUXOMAT® PD4-M-2C-SM



The detector must be installed on a solid and level surface. The circular cover ring must be removed prior to assembly. To do this, twist the lens anticlockwise through approximately 5° and lift off.

Having connected up the wires in accordance with regulations, secure the detector with 2 screws. After installation replace the lens and lock (turn clockwise). Mains to be connected.

# 2b.Installation LUXOMAT® PD4-M-2C-FC



A circular opening of diameter 68 mm must first of all be produced in the ceilin

Having connected up the cables in accordance with regulations, the detector is inserted into the opening as shown in the drawing opposite and fixed into position with the assistance of the spring clip.

# 2c. Installation LUXOMAT® PD4-M-2C-FM




The detector can be installed in conventional inlet-sockets mounted on the ceiling. The assembly plate enclosed must be stripped off prior to installation and secured to the ceiling using 4 screws.

Having connected up the cables in accordance with regulations, the detector can be placed in position as shown in the drawing opposite and, applying a little pressure, can then be locked into position with the assistance of the spring clips. (For connections please see pt. 22!)


## 3a. Hardware configuration SM

Position LED's

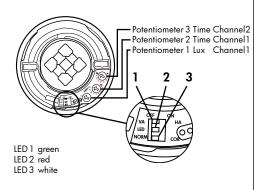

## 3b. Hardware configuration FC


Position LED's and potentiometers

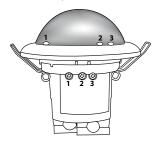

LED 1 green LED 2 white LED 3 red Potentiometer 1 Lux Channel 1 Potentiometer 2 Time Channel 1 Potentiometer 3 Time Channel 2


### 3c. Hardware configuration FM

Position LED's and potentiometers

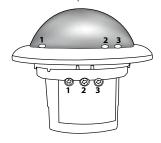

LED 1 green LED 2 white LED 3 red Potentiometer 1 Lux Channel 1 Potentiometer 2 Time Channel 1 Potentiometer 3 Time Channel 2


## 4a. Position potentiometers DIP-Switch SM

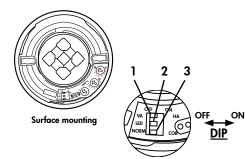

- DIP 1 Fully automatic/semi automatic mode
- DIP 2 LED ON/OFF
- **DIP 3** Change between corridor mode and standard mode

The DIP switch settings are overriden using the remote control.

## 4b. Position DIP-Switch FC

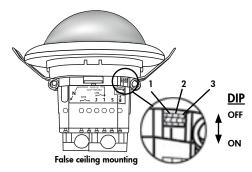


DIP 1 Fully automatic/semi automatic mode

DIP 2 LED ON/OFF

 $\mbox{\bf DIP~3}~$  Change between corridor mode and standard mode

The DIP switch settings are overriden using the remote control.

#### 4c. Position DIP-Switch FM

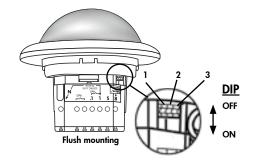

DIP 1 Fully automatic/semi automatic mode

DIP 2 LED ON/OFF

**DIP 3** Change between corridor mode and standard mode

The DIP switch settings are overriden using the remote control.

### 5. DIP switch functions

DIP- switch	ON	OFF
1	Semi automatic mode	Fully automatic mode
2	LED OFF	LED ON
3 Corridor mode		Standard mode



**Corridor function:** After deactivation by an external push button, the detector switches off and returns to automatic mode after 5 sec.

The DIP settings are enabled again by:

- Adjusting the DIP switches when closed
- Reset with test sun setting at the potentiometers
- Reset when open

#### 6. Putting into operation / Settings

#### Self test cycle

After an initial 60-second self-test cycle, the LUXOMAT® PD4-M-2C is ready for operation



#### Potentiometer 1 - Adjustment twilight-switch for channel 1 "Light"

The switch-on value for the light can be set at between 10 and  $2000\,\mbox{Lux}.$  Using the potentiometer, the luminance set points can be set as desired.



## Determining the current brightness

Set potentiometer 2 to the "Test" setting. The green LED lights up permanently as soon as the value set at the potentiometer exceeds the current measured brightness.



Potentiometer 2 - Adjustment follow-up time channel 1 "Light" Symbol TEST: Test mode, reacts on motion only. Every move ment switches on the light for a period of 2 seconds, switching it off for a period of 2 seconds. The time can be set infinitely variably at between 15 sec. and 16 minutes.

## Potentiometer 3 - Follow-up time for appliance-control



The time can be set infinitely variably at between 5 minutes and 120 minutes. After 15 minutes the switch-on delay is activated. This is around 5 min. If there are not detected any further movements within this period, the switch-on delay starts again.

Symbol  $\Pi$ : Impulse = 2,5 sec. Symbol A: Alarm impulse =  $2 \, \text{sec.}$ 

#### Alarm impulse

In order to set off an alarm impulse, at least 3 movements within 9 sec. have to be detected.

The potentiometer settings are overriden using the remote control.

#### **Pulse spacing PD-Slave**



2 or 9 seconds can be set for the pause between 2 pulses sent to the master. The setting can be made with activated (\*) or deactivated (O) LED indicator.

For devices with a separate slave input, 2 sec. can be set.

#### 7. Reset and default settings



#### 1. Default settings

If the potentiometers are in the "Test" and "Sun" position and the detector is unprogrammed, the factory program is activated: 500 lux and

#### 2. Reset

If both potentiometers are returned to the "Test" and "Sun" setting from any other position, a reset is executed. All values programmed with the remote control are deleted.

# 8. Putting into operation of the remote control IR-PD-2C (optional)

## Check Battery:

Open battery compartment by pressing the plastic springs together and removing the batterv-holder.

Caution: Settings with remote control supersede the settings by potentiometers.





Film IR-PD-2C-S

IR-PD-2C - 92475




Option: Remote control IR-PD-2C(-S)

(to be used with IR-PD)

Wall bracket for remote control

An adhesive film for the surface of the IR-PD-2C-S is included with the device. If required, this can be used for any **B.E.G.** remote control with 27 keys. In order to benefit from the whole range of functions of the PD4-M-2C, please order separately the remote control IR-PD-2C.

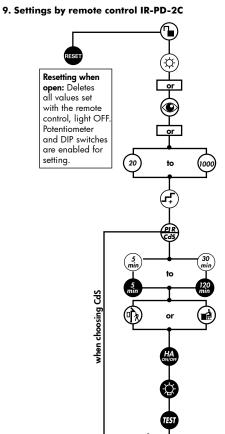

Unlocking device - Activation of the programming mode

Daytime operation, detector only activated by motion

Automatic reading in the current light value as new luminance set point

Luminance set point for channel 1 20 - 1000 Lux

Increase the current light level by 20 resp 50 Lux

Change between motion detector and photo electric switch

Follow-up time ch1 (light)/ ch 2 (HVAC) 5 - 30 min. resp. 120 min. or impulse (switch-on delay ch 2:5 min.)



Detection sensitivity reduced or normal

Change between fully automatic and semi automatic mode (HA)

Light ON/OFF

LED ON/OFF (by holding down the push button)

Locking device - Exit programming mode

White LED flashes

Permanent protection against sabotage

#### 10. Key functions in closed state



### Permanent protection against sabotage

This function blocks the unit permanently. This operating mode can only be activated during the period of 5 seconds (white LED flash) after pressing the "lock" button. The procedure for leaving this mode is as follows



- 2. Apply current for 31 59 seconds
- 3. Switch of the current again
- 4. Apply current, wait for selftest cycle




5. Open detector



Light ON/OFF during the detection of motion plus follow-up time; Activation of the 12 h-ON/OFF-function by holding down the push button



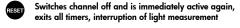






Changes to "open" state

## 11. Explanation of the remote control button functions

11a. In the initialisation period

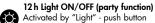

Deactivated by "Reset"- push button (default)

Activated by "outside"- push button

Deactivate by "inside"- push button (default)

Forced shutdown Activated by "sun" - push button

Deactivate by "moon"- push button (default)

## 11b. In opened state

This push button opens the detector and the following functions can then be programmed.

Attention: The detector is closed automatically:

after every voltage recovery

• after 3 minutes

The state changes to "closed".

In the first 5 seconds, the white LED flashes every 0.5 seconds. During this time, sabotage protection can be activated.

The device distinguishes between 2 procedures:

 Reading in with lighting switched on: The switch-on value is determined automatically.

Determining the switch-on value:


Press the "eye" push button
 Switch off the light (2 seconds later)


3. Read in the brightness

4. Switch-on value = Read brightness

Reading in with lighting switched off:

When the push button is pressed, the current brightness is specified as the switch-on value. The switch-off value is determined automatically.

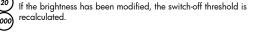

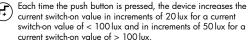

( Standard sensitivity for most applications

(P) Reduced sensitivity for outdoor applications

When the pulse function of channel 1 is active, a pulse of 1 sec. is generated every 9 sec. If the pulse function is activated via remote control, the pause between 2 pulses can be modified. After activating the function via the "Pulse" push button, select the desired time within 5 sec .:

 $\binom{5}{\min} = 9 \text{ sec.}, \ \binom{10}{\min} = 10 \text{ sec.}, \ \binom{15}{\min} = 15 \text{ sec.}, \ \binom{30}{\min} = 30 \text{ sec.}$ 

The impulse function of channel 2 depends only on motion ! After each movement the HVAC channel is activated for 2.5 sec.; time delay starts afterwards for 9 sec.

The "Test" push button can be used to set the LED ON/OFF function. To do this, hold down the push button for 3 sec. **Please note** that in the open state and in test mode, the LED indicators are always ON.

## Twilight switch function (CdS)

If the CdS function is active, the detector acts as a simple twilight switch. Only the brightness can be set in this mode. Movements are no longer indicated by the red LED.

## Push button acknowledgement:

Each push of a button is indicated by lamp acknowledgement and by the white LED.

"Light ON" status: OFF/ON (approx. 0.5 sec. each) "Light OFF" status: ON/OFF (approx. 0.5 sec. each)

### 12. Switch-off threshold brightness

1. If the switch-on threshold has been modified by the potentiometer or remote control, the switch-off threshold stored in the EEPROM is deleted and is then recalculated on the next

Determining the switch-off value

1. Switch on for 5 min. with dark and motion

2. Light OFF for 2 sec.

3. Internal calculation of the switch-off value

2. If the eye push button is pressed, the switch-off threshold is recalculated. See also Remote control -> Eye section

3. Switch-off delay

If the determined switch-off threshold is exceeded during operation, the detector only switches off after a delay of approx 15 minutes. This compensates for any brief fluctuations in the brightness.

## 13a. Behaviour of external push button/IR "Light"

The "Corridor" and "Light ON/OFF" functions are mutually exclusive. If both are activated, the detector performs the corridor

The behaviour when the push button is pressed is defined as follows:

#### Corridor function activated

#### Liaht ON:

Push button pressed briefly: Light OFF -> Active after 5 sec. Push button held down: Light OFF -> Active after 5 sec.

Push button pressed briefly: Light ON as long as motion + Lag time Push button held down: Light ON as long as motion + Lag time

#### 13b. Behaviour of external push button/IR "Light"

## 12 h Light ON/OFF activated

### Light ON:

Push button pressed briefly: Light OFF -> Active after 5 sec. Push button held down: 12 h OFF

Push button pressed briefly: Light ON as long as motion + Lag time Push button held down: 12 h ON

#### 12 h Light ON/OFF deactivated

#### Light ON:

Push button pressed briefly: Light OFF as long as motion + Lag time Push button held down: Light OFF as long as motion + Lag time

Push button pressed briefly: Light ON as long as motion + Lag time Push button held down: Light ON as long as motion + Lag time

#### 13c. Behaviour of external push button/IR "Forced shutdown"

#### Forced shutdown active

#### Light OFF:

Light OFF: Push button pressed briefly: Light ON for approx. 30 min., then forced shutdown if the set brightness is still exceeded.

#### 14. Other functions

#### Activation of light for 12 h via mains interruption

- 1. Interrupt current
- 2. Apply current for 2 to 5 sec.
- 3. Interrupt current again
- 4. Apply current5. Detector is now ON for 12 h

## **Exiting sabotage**

- 1. Interrupt current
- 2. Apply current for 30 to 60 sec.
- 3. Interrupt current again
- 4. Apply current
- 5. Detector is in simple closed state

## 230 V AC permanently at the slave input

If 230 V AC is applied at the slave input for longer than 10 sec., the light is switched on permanently. When the 230 V is removed, the light is switched off and automatic mode is activated.

## 230 V AC for 1 - 3 sec. at push button connection S

If 230 V AC is applied for 1 -  $3\,\mathrm{sec.}$  at push button connection S, this is interpreted as a slave signal at slave connection R. This ensures that the detector is compatible with previous versions.

## 15. Fully automatic and semi automatic mode

(see functions IR-PD-2C)

### Fully automatic operation

In this operating mode, the lighting switches automatically on and off for increased comfort, depending on presence and brightness. Channel 1 switches on in the event of motion if "dark" is detected.

## Semi automatic operation


In this operating condition, in order to gain increased savings, the lighting is energized only after being manually switched on. Switch-off takes place automatically or manually.

The semi automatic mode basically behaves like the fully automatic one. However, the difference is that switching-on must always be carried out manually!


As many (NO-contact) buttons as desired can be wired in parallel on the "S" button input (ON/OFF).

Triggering in semi automatic mode: If the detector switches off in semi automatic mode (lag timer elapsed), the detector is switched on again within 10 sec. by motion (despite semi-automatic mode).


### 16. Range of Coverage

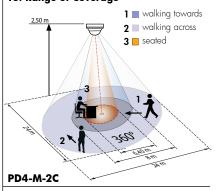


#### 17. Exclude sources of interferences

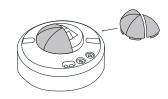

SM

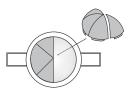

FC

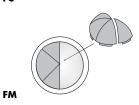

case the sensing area of the  $\textbf{LUXOMAT}^{\otimes}$ PD4-M-2C is too large or areas are being covered that should not be monitored, the range can be reduced or limited through use of the enclosed maskina clips.

#### 18. Article / Part nr. / Accessory

Тур	SM	FC	FM
PD4-M-2C (Master)	92140	92148	92255
PD4-S (Slave)	92142	92254	92163

Accessory: BSK Ball basket guard

LUXOMAT® Remote control:	
IR-PD (incl. wall bracket)	92160
IR-PD-2C (incl. wall bracket)	92475

92199

## 19. Technical data PD4-Master-2C

Sensor and power supply in one case Power supply:  $230\,\text{V} \sim \pm 10\,\%$  Power consumption:  $< 1\,\text{W}$ Ambient temperature: -25°C to +50°C Degree of protection / class: IP20 / II Settings: Potentiometer, DIP-switch and by remote control

Light values:

20 - 1000 Lux (with remote control) 10 - 2000 Lux (with potentiometer)

Extension of the detection area: with Slave-devices Area of coverage: circular 360°

Range of coverage  $\emptyset$  H 2,50 m / T = 18°C: seated 6,40 m / tangential 24 m / radial 8 m Recommended height for mounting: 2 - 3 m

Light measurement: mixed light, daylight + artificial light
• Channel 1 for light control

Type of contact: NOC/with pretravel tungsten contact

Contact load: 2300 W cos  $\phi$ =1 /

1150 VA  $\cos \varphi = 0.5$ 

Time-settings:

5 sec. - 16 min./ test with potentiometer 5 min. - 30 min. / test with remote control

 Channel 2 for control devices (only reacts on motion)

Contact load:  $230\,V_{\sim}$ ,  $3\,A\,\cos\phi=1$ Time-settings:  $5\,$ min. -  $120\,$ min. with time delay of 5 min. for follow-up time > 15 min./ Alarm impulse

Dimensions H x Ø [mm]:

PD4-M-2C SM FC FM 76 x 101 97 x 103 84 x 97 **Visible portion when built into ceiling FC:** 34 x 10 mm


## **Technical data PD4-Slave**

Power supply:  $230 \,\text{V} \sim \pm 10 \,\%$ Impulse output: Optocoupler max. 2W Impulse duration: 2 sec. or 9 sec Dimensions: see above

C  $\epsilon$  Declaration of Conformity: The product complies with the low voltage recommendation 2006/95/EC and the EMV recommendation 2004/108/EC.

## 20. Wiring diagram

Standard operation Master/Slave

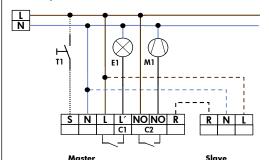

## M1 = HVAC function

#### Optional

T1 = NO-button for semi automatic mode; Extension of the detection area with Slave-devices


## 22. LED function displays

LED function indicators after each mains recovery (60 sec. initialisation period)				
Operating state	LED function indicators			
Factory program active	White, red and green flash in quick succession for 10 sec., then initialisation indicators, see below			
Double-locked	white and green shines for 5 sec. all 20 sec., afterwards initialising notification			
	Indicator unprogrammed	Indicator programmed	Indicator also when forced shutdown is activated	
Standard mode	Red flashes	Red flashes quickly	Every 5 sec., 4 x white, red and green in quick succession	
12 h ON/OFF active	Red and green flash	Red and green flash quickly	Every 5 sec., 4 x white, red and green in quick succession	
Corridor active	Red and white flash	Red and white flash quickly	Every 5 sec., 4 x white, red and green in quick succession	
12 h ON/OFF & corridor active	Red, green and white flash	Red, green and white flash quickly	Every 5 sec., 4 x white, red and green in quick succession	
CdS active	_	Red and white flash	Then <u>no</u> red LED for motion detection	

LED function indicators during operation		
Process	LED function indicators	
Motion detection	Red flashes on each detected movement	
Semi-automatic mode active	de White is ON	
Impulse active	Red and green flash one time all 4 sec.	
Corridor active	White ON 1 sec. and OFF 4 sec.	
Corridor and semi-automatic mode active	White ON 4 sec. and OFF 1 sec.	
Too bright detected	Green flashes	
Light measurement active	Green flashes once every 10 sec.	
12 h ON/OFF func- tion active	Red and green flash alternately	
Duration ON active (by slave)	Red flashes quickly	
IR command	White flashes once	
IR command "Open" and sabotage active	White and green flash once slowly	


## 22. PD4-M-2C-SM - Connections

Wiring diagram PD4-M-2C-SM

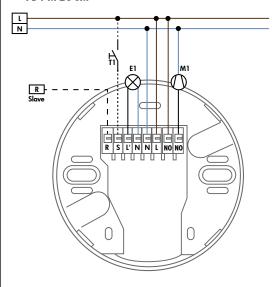

#### 22. PD4-M-2C-FC - Connections

Wiring diagram PD4-M-2C-FC

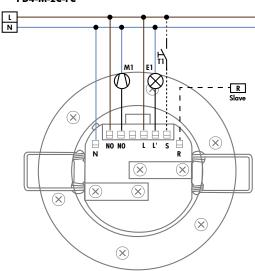

## 22. PD4-M-2C-FM - Connections

Wiring diagram PD4-M-2C-FM

