



Sewi KNX TH

Combined Indoor Sensor

Item numbers 70393 (white), 70693 (jet black)



| | |
|---|-----------|
| 1. Description | 3 |
| 1.0.1. Scope of delivery | 3 |
| 1.1. Technical data | 4 |
| 1.1.1. Measuring accuracy | 4 |
| 2. Installation and start-up | 5 |
| 2.1. Installation notes | 5 |
| 2.2. Installation location | 5 |
| 2.3. Construction of the sensor | 6 |
| 2.3.1. Housing from the outside | 6 |
| 2.3.2. Printed circuit boards / connections | 7 |
| 2.4. Assembly | 7 |
| 2.5. Notes on mounting and commissioning | 8 |
| 3. Addressing the equipment | 9 |
| 4. Maintenance | 9 |
| 5. Transfer protocol | 10 |
| 5.1. List of all communication objects | 10 |
| 6. Parameter setting | 22 |
| 6.1. Behaviour on power failure/ restoration of power | 22 |
| 6.2. General settings | 22 |
| 6.3. Temperature Measurement | 22 |
| 6.4. Temperature threshold values | 23 |
| 6.4.1. Threshold value 1, 2, 3, 4 | 23 |
| 6.5. Temperature PI control | 25 |
| 6.5.1. Heating control level 1/2 | 31 |
| 6.5.2. Cooling control level 1/2 | 33 |
| 6.6. Summer Compensation | 35 |
| 6.7. Humidity Measurement | 36 |
| 6.8. Humidity threshold values | 37 |
| 6.8.1. Threshold value 1, 2, 3, 4 | 37 |
| 6.9. Humidity PI control | 40 |
| 6.10. Dewpoint measurement | 42 |
| 6.10.1. Cooling medium temp. monitoring | 43 |
| 6.11. Absolute humidity | 45 |
| 6.12. Comfort field | 45 |
| 6.13. Variable comparator | 46 |
| 6.13.1. Control variable comparator 1/2/3/4 | 46 |
| 6.14. Computer | 47 |
| 6.14.1. Computer 1-8 | 47 |
| 6.15. Logic | 50 |
| 6.15.1. AND logic 1-8 and OR logic outputs 1-8 | 51 |
| 6.15.2. AND logic connection inputs | 53 |
| 6.15.3. Connection inputs of the OR logic | 55 |



Installation, inspection, commissioning and troubleshooting of the device must only be carried out by a competent electrician.

This manual is amended periodically and will be brought into line with new software releases. The change status (software version and date) can be found in the contents footer. If you have a device with a later software version, please check **www.elsner-elektronik.de** in the menu area "Service" to find out whether a more up-to-date version of the manual is available.

Clarification of signs used in this manual



Safety advice.



Safety advice for working on electrical connections, components, etc.

DANGER!

... indicates an immediately hazardous situation which will lead to death or severe injuries if it is not avoided.

WARNING!

... indicates a potentially hazardous situation which may lead to death or severe injuries if it is not avoided.

CAUTION!

... indicates a potentially hazardous situation which may lead to trivial or minor injuries if it is not avoided.



ATTENTION! ... indicates a situation which may lead to damage to property if it is not avoided.

ETS

In the ETS tables, the parameter default settings are marked by underlining.

1. Description

The **Sensor Sewi KNX TH** for the KNX bus system measures the temperature and the air humidity and calculates the dew-point. Via the bus, the indoor sensor can receive external values of temperature and humidity and process them further with its own data to a total value (mixed value, e.g. room average).

All measurement values can be used for the control of limit-dependent switching outputs. States can be linked via AND logic gates and OR logic gates. Multi-function modules change input data as required by means of calculations, querying a condition, or converting the data point type. In addition, an integrated manipulated variable comparator can compare and output variables that were received via communication objects.

Integrated PI-controllers control ventilation (according to humidity) and heating/cooling (according to temperature). The **Sewi KNX TH** can output a warning to the bus as soon as the comfort field, as per DIN 1946, is left.

Functions:

- Measuring the **temperature** and **air humidity** (relative, absolute), each with **mixed value calculation**. The share of internal measurement value and external value can be set as a percentage
- Bus message, whether the values for temperature and air humidity are within the **comfort field** (DIN 1946). **Dew point** calculation
- **Threshold values** can be adjusted per parameter or via communication objects
- **PI-controller for heating** (one or two-stage) and **cooling** (one or two-stage) according to temperature. Regulation according to separate setpoints or basic setpoint temperature
- **PI controller for humidity** according to humidity: Ventilate/Air (one-stage) or Ventilate (one or two-stage)
- **8 AND and 8 OR logic gates**, each with 4 inputs. All switching events as well as 16 logic inputs (in the form of communications objects) can be used as inputs for the logic gates. The output of each gate can be configured optionally as 1-bit or 2 x 8-bit
- **8 multi-function modules** (computers) for changing the input data by calculations, by querying a condition or by converting the data point type
- **4 actuating variable comparators** to output minimum, maximum or average values. 5 inputs each for values received via communication objects
- **Summer compensation** for cooling systems. A characteristic curve matches the target temperature in the room to the external temperature and sets the minimum and maximum target temperature values

Configuration is made using the KNX software ETS. The **product file** can be downloaded from the Elsner Elektronik website on www.elsner-elektronik.de in the "Service" menu.

1.0.1. Scope of delivery

- Combined sensor

1.1. Technical data

| | |
|-----------------------|--|
| Housing | Plastic |
| Colours | <ul style="list-style-type: none"> • White similar to signal white RAL 9003 (skirting)/ grey white RAL 9002 (cover) • Jet black RAL 9005 |
| Assembly | Surface, wall or ceiling installation |
| Protection category | IP 30 |
| Dimensions | Ø approx. 105 mm, height approx. 32 mm |
| Total weight | approx. 45 g |
| Ambient temperature | Operation -25...+80°C, storage -30...+85°C |
| Ambient humidity | max. 95% RH, avoid condensation |
| Operating voltage | KNX bus voltage |
| Bus current | max. 10 mA |
| Data output | KNX +/- bus plug-in terminal |
| BCU type | Integrated microcontroller |
| PEI type | 0 |
| Group addresses | max. 2000 |
| Assignments | max. 2000 |
| Communication objects | 291 |
| Temperature sensor: | |
| Measurement range | -25°C ... +80°C |
| Resolution | 0.1°C |
| Accuracy* | ±0,8°C at -20...-10°C ±0,5°C at -10...+80°C |
| Humidity sensor: | |
| Measurement range | 0% rH ... 100% rH |
| Resolution | 0.1% rH |
| Accuracy | ±7,5% rH at 0...10% rH ±4,5% rH at 10...90% rH ±7,5% rH at 90...100% rH |

* Follow the instructions on *Measuring accuracy*

The product is compliant with the provisions of the EU guidelines.

1.1.1. Measuring accuracy

Deviations in measured values due to interfering sources (see chapter *installation location*) must be corrected in the ETS in order to achieve the specified accuracy of the sensor (offset).

During the **Temperature measurement**, the self-heating of the device is taken into consideration by the electronics. It is compensated by the software, therefore the displayed/output indoor temperature measuring value is correct.

2. Installation and start-up

2.1. Installation notes



Installation, testing, operational start-up and troubleshooting should only be performed by an electrician.



CAUTION! **Live voltage!**

There are unprotected live components inside the device.

- National legal regulations are to be followed.
 - Ensure that all lines to be assembled are free of voltage and take precautions against accidental switching on.
 - Do not use the device if it is damaged.
 - Take the device or system out of service and secure it against unintentional use, if it can be assumed, that risk-free operation is no longer guaranteed.
-

The device is only to be used for its intended purpose. Any improper modification or failure to follow the operating instructions voids any and all warranty and guarantee claims.

After unpacking the device, check it immediately for possible mechanical damage. If it has been damaged in transport, inform the supplier immediately.

The device may only be used as a fixed-site installation; that means only when assembled and after conclusion of all installation and operational start-up tasks and only in the surroundings designated for it.

Elsner Elektronik is not liable for any changes in norms and standards which may occur after publication of these operating instructions.

2.2. Installation location



Install and use only in dry interior rooms! Avoid condensation.

The **Sensor Sewi KNX TH** is installed surface mounted on walls or ceilings.

When selecting an installation location, please ensure that the measurement results of **temperature and humidity** are affected as little as possible by external influences. Possible sources of interference include:

- Direct sunlight
- Drafts from windows and doors
- Draughts from ducts coming from other rooms or the outdoors
- Warming or cooling of the building structure on which the sensor is mounted, e.g. due to sunlight, heating or cold water pipes

- Connection lines and empty ducts which lead from warmer or colder areas to the sensor

Measurement variations from such sources of interference must be corrected in the ETS in order to ensure the specified accuracy of the sensor (offset).

2.3. Construction of the sensor

2.3.1. Housing from the outside



Fig. 1

A Recess to open the housing.
When closing the housing,
the recess aligns to the
marking on the skirting

2.3.2. Printed circuit boards / connections

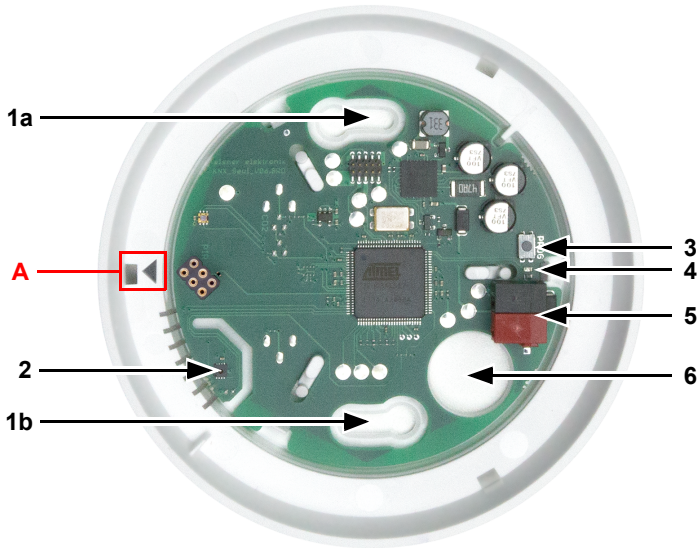


Fig. 2

- 1 a+b Long holes for mounting (hole distance 60 mm)
- 2 Sensors for temperature, humidity
- 3 Programming button
- 4 Programming LED
- 5 KNX-terminal BUS +/-
- 6 Cable bushing
- A Mark for aligning the cover

2.4. Assembly



Fig. 3

Open the housing. To do this, carefully lift the cover from the skirting. Start at the recess (Fig. 1: A).

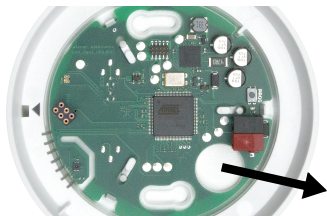


Fig. 4

Lead the bus cable through the cable bushing in the skirting.

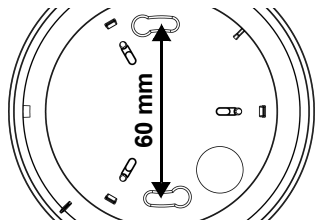


Fig. 5

Screw the skirting to the wall or the ceiling.
Hole distance 60 mm.

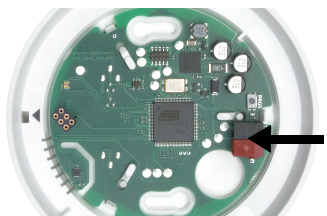


Fig. 6

Connect the KNX bus to the KNX terminal.



Fig. 7

Close the housing by positioning the cover and snapping it into place. To do this, align the recess on the cover to the marking on the skirting (Fig. 1+2: A).

2.5. Notes on mounting and commissioning

Never expose the device to water (e.g. rain) or dust. This can damage the electronics. You must not exceed a relative humidity of 95%. Avoid condensation.

The air slots on the side must not be closed or covered.

After the bus voltage has been applied, the device will enter an initialisation phase lasting a few seconds. During this phase no information can be received or sent via the bus.

3. Addressing the equipment

The equipment is delivered with the bus address 15.15.255. You can program a different address in the ETS by overwriting the address 15.15.255 or by teaching the device via the programming button.

The programming button is on the inside of the housing (Fig. 2: No. 3).

4. Maintenance

The air slots on the side must not get dirty or covered. As a rule, it is sufficient to wipe the device with a soft, dry cloth twice a year.

5. Transfer protocol

Units:

Temperatures in degrees Celsius

Air humidity in %

Absolute air humidity in g/kg and/or g/m³

Variables in %

5.1. List of all communication objects

Abbreviation flags:

C Communication

R Read

W Write

T Transfer

U Update

| No. | Text | Function | Flags | DPT type | Size |
|-----|--|------------------|-------|-------------------------|---------|
| 1 | Software version | Output | R-CT | [217.1] DPT_Version | 2 bytes |
| 41 | Temperature sensor: Malfunction | Output | R-CT | [1.1] DPT_Switch | 1 bit |
| 42 | Temperature sensor: External measurement | Input | -WCT | [9.1] DPT_Value_Temp | 2 bytes |
| 43 | Temperature sensor: Measured value | Output | R-CT | [9.1] DPT_Value_Temp | 2 bytes |
| 44 | Temperature sensor: Total measurement | Output | R-CT | [9.1] DPT_Value_Temp | 2 bytes |
| 45 | Temperature sensor: Min./Max. measurement query | Input | -WC- | [1.017] DPT_Trigger | 1 bit |
| 46 | Temperature sensor: Minimum measurement | Output | R-CT | [9.1] DPT_Value_Temp | 2 bytes |
| 47 | Temperature sensor: Maximum measurement | Output | R-CT | [9.1] DPT_Value_Temp | 2 bytes |
| 48 | Temperature sensor: Min./Max. measurement reset | Input | -WC- | [1.017] DPT_Trigger | 1 bit |
| 51 | Temp. threshold value 1: Absolute value | Input/ Output | RWCT | [9.1] DPT_Value_Temp | 2 bytes |
| 52 | Temp. threshold value 1: (1:+ 0:-) | Input | -WC- | [1.1] DPT_Switch | 1 bit |
| 53 | Temp. threshold value 1: Switching delay from 0 to 1 | Input | -WC- | [7.5] DPT_TimePeriodSec | 2 bytes |
| 54 | Temp. threshold value 1: Switching delay from 1 to 0 | Input | -WC- | [7.5] DPT_TimePeriodSec | 2 bytes |
| 55 | Temp. threshold value 1: Switching output | Output | R-CT | [1.1] DPT_Switch | 1 bit |

| No. | Text | Function | Flags | DPT type | Size |
|-----|--|--------------|-------|--------------------------|---------|
| 56 | Temp. threshold value 1: Switching output block | Input | -WC- | [1.1] DPT_Switch | 1 bit |
| 58 | Temp. threshold value 2: Absolute value | Input/Output | RWCT | [9.1] DPT_Value_Temp | 2 bytes |
| 59 | Temp. threshold value 2: (1:+ 0:-) | Input | -WC- | [1.1] DPT_Switch | 1 bit |
| 60 | Temp. threshold value 2: Switching delay from 0 to 1 | Input | -WC- | [7.5] DPT_TimePeriodSec | 2 bytes |
| 61 | Temp. threshold value 2: Switching delay from 1 to 0 | Input | -WC- | [7.5] DPT_TimePeriodSec | 2 bytes |
| 62 | Temp. threshold value 2: Switching output | Output | R-CT | [1.1] DPT_Switch | 1 bit |
| 63 | Temp. threshold value 2: Switching output block | Input | -WC- | [1.1] DPT_Switch | 1 bit |
| 65 | Temp. threshold value 3: Absolute value | Input/Output | RWCT | [9.1] DPT_Value_Temp | 2 bytes |
| 66 | Temp. threshold value 3: (1:+ 0:-) | Input | -WC- | [1.1] DPT_Switch | 1 bit |
| 67 | Temp. threshold value 3: Switching delay from 0 to 1 | Input | -WC- | [7.5] DPT_TimePeriodSec | 2 bytes |
| 68 | Temp. threshold value 3: Switching delay from 1 to 0 | Input | -WC- | [7.5] DPT_TimePeriodSec | 2 bytes |
| 69 | Temp. threshold value 3: Switching output | Output | R-CT | [1.1] DPT_Switch | 1 bit |
| 70 | Temp. threshold value 3: Switching output block | Input | -WC- | [1.1] DPT_Switch | 1 bit |
| 72 | Temp. threshold value 4: Absolute value | Input/Output | RWCT | [9.1] DPT_Value_Temp | 2 bytes |
| 73 | Temp. threshold value 4: (1:+ 0:-) | Input | -WC- | [1.1] DPT_Switch | 1 bit |
| 74 | Temp. threshold value 4: Switching delay from 0 to 1 | Input | -WC- | [7.5] DPT_TimePeriodSec | 2 bytes |
| 75 | Temp. threshold value 4: Switching delay from 1 to 0 | Input | -WC- | [7.5] DPT_TimePeriodSec | 2 bytes |
| 76 | Temp. threshold value 4: Switching output | Output | R-CT | [1.1] DPT_Switch | 1 bit |
| 77 | Temp. threshold value 4: Switching output block | Input | -WC- | [1.1] DPT_Switch | 1 bit |
| 311 | Humidity sensor: Malfunction | Output | R-CT | [1.1] DPT_Switch | 1 bit |
| 314 | Humidity sensor: External measurement | Input | -WCT | [9.7] DPT_Value_Humidity | 2 bytes |
| 315 | Humidity sensor: Measured value | Output | R-CT | [9.7] DPT_Value_Humidity | 2 bytes |
| 316 | Humidity sensor: Total measurement | Output | R-CT | [9.7] DPT_Value_Humidity | 2 bytes |

| No. | Text | Function | Flags | DPT type | Size |
|-----|--|--------------|-------|--------------------------|---------|
| 317 | Humidity sensor: Min./Max. measurement query | Input | -WC- | [1.017] DPT_Trigger | 1 bit |
| 318 | Humidity sensor: Minimum measurement | Output | R-CT | [9.7] DPT_Value_Humidity | 2 bytes |
| 319 | Humidity sensor: Maximum measurement | Output | R-CT | [9.7] DPT_Value_Humidity | 2 bytes |
| 320 | Humidity sensor: Min./Max. measurement reset | Input | -WC- | [1.017] DPT_Trigger | 1 bit |
| 331 | Humidity threshold value 1: Absolute value | Input/Output | RWCT | [9.7] DPT_Value_Humidity | 2 bytes |
| 332 | Humidity threshold value 1: (1:+ 0:-) | Input | -WC- | [1.1] DPT_Switch | 1 bit |
| 333 | Humidity threshold value 1: Delay from 0 to 1 | Input | -WC- | [7.5] DPT_TimePeriodSec | 2 bytes |
| 334 | Humidity threshold value 1: Delay from 1 to 0 | Input | -WC- | [7.5] DPT_TimePeriodSec | 2 bytes |
| 335 | Humidity threshold value 1: Switching output | Output | R-CT | [1.1] DPT_Switch | 1 bit |
| 336 | Humidity threshold value 1: Switching output block | Input | -WC- | [1.1] DPT_Switch | 1 bit |
| 337 | Humidity threshold value 2: Absolute value | Input/Output | RWCT | [9.7] DPT_Value_Humidity | 2 bytes |
| 338 | Humidity threshold value 2: (1:+ 0:-) | Input | -WC- | [1.1] DPT_Switch | 1 bit |
| 339 | Humidity threshold value 2: Delay from 0 to 1 | Input | -WC- | [7.5] DPT_TimePeriodSec | 2 bytes |
| 340 | Humidity threshold value 2: Delay from 1 to 0 | Input | -WC- | [7.5] DPT_TimePeriodSec | 2 bytes |
| 341 | Humidity threshold value 2: Switching output | Output | R-CT | [1.1] DPT_Switch | 1 bit |
| 342 | Humidity threshold value 2: Switching output block | Input | -WC- | [1.1] DPT_Switch | 1 bit |
| 343 | Humidity threshold value 3: Absolute value | Input/Output | RWCT | [9.7] DPT_Value_Humidity | 2 bytes |
| 344 | Humidity threshold value 3: (1:+ 0:-) | Input | -WC- | [1.1] DPT_Switch | 1 bit |
| 345 | Humidity threshold value 3: Delay from 0 to 1 | Input | -WC- | [7.5] DPT_TimePeriodSec | 2 bytes |
| 346 | Humidity threshold value 3: Delay from 1 to 0 | Input | -WC- | [7.5] DPT_TimePeriodSec | 2 bytes |
| 347 | Humidity threshold value 3: Switching output | Output | R-CT | [1.1] DPT_Switch | 1 bit |
| 348 | Humidity threshold value 3: Switching output block | Input | -WC- | [1.1] DPT_Switch | 1 bit |
| 349 | Humidity threshold value 4: Absolute value | Input/Output | RWCT | [9.7] DPT_Value_Humidity | 2 bytes |

| No. | Text | Function | Flags | DPT type | Size |
|-----|--|----------|-------|---------------------------------|-------------|
| 350 | Humidity threshold value 4: (1:+ 0:-) | Input | -WC- | [1.1] DPT_Switch | 1 bit |
| 351 | Humidity threshold value 4: Delay from 0 to 1 | Input | -WC- | [7.5] DPT_Time- PeriodSec | 2 bytes |
| 352 | Humidity threshold value 4: Delay from 1 to 0 | Input | -WC- | [7.5] DPT_Time- PeriodSec | 2 bytes |
| 353 | Humidity threshold value 4: Switching output | Output | R-CT | [1.1] DPT_Switch | 1 bit |
| 354 | Humidity threshold value 4: Switching output block | Input | -WC- | [1.1] DPT_Switch | 1 bit |
| 381 | Dewpoint: Measured value | Output | R-CT | [9.1] DPT_Val- ue_Temp | 2 bytes |
| 382 | Coolant temp.: Threshold value | Output | R-CT | [9.1] DPT_Val- ue_Temp | 2 bytes |
| 383 | Coolant temp.: Actual value | Input | RWCT | [9.1] DPT_Val- ue_Temp | 2 bytes |
| 384 | Coolant temp.: Offset change (1:+ 0:-) | Input | -WC- | [1.1] DPT_Switch | 1 bit |
| 385 | Coolant temp.: Current offset | Output | R-CT | [9.1] DPT_Val- ue_Temp | 2 bytes |
| 386 | Coolant temp.: Switching delay from 0 to 1 | Input | -WC- | [7.5] DPT_Time- PeriodSec | 2 bytes |
| 387 | Coolant temp.: Switching delay from 1 to 0 | Input | -WC- | [7.5] DPT_Time- PeriodSec | 2 bytes |
| 388 | Coolant temp.: Switching output | Output | R-CT | [1.1] DPT_Switch | 1 bit |
| 389 | Coolant temp.: Switching output block | Input | -WC- | [1.1] DPT_Switch | 1 bit |
| 391 | Absolute humidity [g/kg] | Output | R-CT | [14.5] DPT_Val- ue_Amplitude | 4 bytes |
| 392 | Absolute humidity [g/m ²] | Output | R-CT | [14.17] DPT_Val- ue_Density | 4 bytes |
| 394 | Ambient climate status: 1 = comfortable 0 = uncomfortable | Output | R-CT | [1.1] DPT_Switch | 1 bit |
| 395 | Ambient climate status: Text | Output | R-CT | [16.0] DPT_String_ASCII | 14 bytes |
| 481 | Temp. controller: HVAC mode (priority 1) | Input | -WC- | [20.102] DPT_H- VACMode | 1 byte |
| 482 | Temp. controller: HVAC mode (priority 2) | Input | RWCT | [20.102] DPT_H- VACMode | 1 byte |
| 483 | Temp. controller: Mode frost/heat protection activation | Input | RWCT | [1.1] DPT_Switch | 1 bit |
| 484 | Temp. controller: Block (1 = Blocking) | Input | -WC- | [1.1] DPT_Switch | 1 bit |
| 485 | Temp. controller: Current setpoint | Output | R-CT | [9.1] DPT_Val- ue_Temp | 2 bytes |

| No. | Text | Function | Flags | DPT type | Size |
|-----|---|--------------|-------|----------------------|---------|
| 486 | Temp. controller: Switching (0: Heating 1: Cooling) | Input | -WC- | [1.1] DPT_Switch | 1 bit |
| 487 | Temp. controller: Setpoint comfort heating | Input/Output | RWCT | [9.1] DPT_Value_Temp | 2 bytes |
| 488 | Temp. controller: Setpoint comfort heating (1:+ 0: -) | Input | -WC- | [1.1] DPT_Switch | 1 bit |
| 489 | Temp. controller: Setpoint comfort cooling | Input/Output | RWCT | [9.1] DPT_Value_Temp | 2 bytes |
| 490 | Temp. controller: Setpoint comfort cooling (1:+ 0: -) | Input | -WC- | [1.1] DPT_Switch | 1 bit |
| 491 | Temp. controller: Basic 16-bit setpoint shift | Input/Output | RWCT | [9.1] DPT_Value_Temp | 2 bytes |
| 492 | Temp. controller: Setpoint standby heating | Input/Output | RWCT | [9.1] DPT_Value_Temp | 2 bytes |
| 493 | Temp. controller: Setpoint standby heating (1:+ 0: -) | Input | -WC- | [1.1] DPT_Switch | 1 bit |
| 494 | Temp. controller: Setpoint standby cooling | Input/Output | RWCT | [9.1] DPT_Value_Temp | 2 bytes |
| 495 | Temp. controller: Setpoint standby cooling (1:+ 0: -) | Input | -WC- | [1.1] DPT_Switch | 1 bit |
| 496 | Temp. controller: Setpoint eco heating | Input/Output | RWCT | [9.1] DPT_Value_Temp | 2 bytes |
| 497 | Temp. controller: Setpoint, eco heating (1:+ 0: -) | Input | -WC- | [1.1] DPT_Switch | 1 bit |
| 498 | Temp. controller: Setpoint eco cooling | Input/Output | RWCT | [9.1] DPT_Value_Temp | 2 bytes |
| 499 | Temp. controller: Setpoint, eco cooling (1:+ 0: -) | Input | -WC- | [1.1] DPT_Switch | 1 bit |
| 500 | Temp. controller: Control variable, heating (level 1) | Output | R-CT | [5.1] DPT_Scaling | 1 byte |
| 501 | Temp. controller: Control variable, heating (level 2) | Output | R-CT | [5.1] DPT_Scaling | 1 byte |
| 502 | Temp. controller: Control variable, cooling (level 1) | Output | R-CT | [5.1] DPT_Scaling | 1 byte |
| 503 | Temp. controller: Control variable, cooling (level 2) | Output | R-CT | [5.1] DPT_Scaling | 1 byte |
| 504 | Temperature controller: Variable for 4/6-way valve | Output | R-CT | [5.1] DPT_Scaling | 1 byte |
| 505 | Temp. controller: Status heating level 1 (1:ON 0:OFF) | Output | R-CT | [1.1] DPT_Switch | 1 bit |
| 506 | Temp. controller: Status heating level 2 (1:ON 0:OFF) | Output | R-CT | [1.1] DPT_Switch | 1 bit |

| No. | Text | Function | Flags | DPT type | Size |
|------|--|------------------|-------|----------------------------|---------|
| 507 | Temp. controller: Status cooling level 1 (1:ON 0:OFF) | Output | R-CT | [1.1] DPT_Switch | 1 bit |
| 508 | Temp. controller: Status cooling level 2 (1:ON 0:OFF) | Output | R-CT | [1.1] DPT_Switch | 1 bit |
| 509 | Temp. controller: Comfort extension status | Input/ Output | RWCT | [1.1] DPT_Switch | 1 bit |
| 510 | Temp. controller: Comfort extension time | Input | RWCT | [7.5] DPT_Time-PeriodSec | 2 bytes |
| 515 | Summer Compensation: Outside temperature | Input | -WCT | [9.1] DPT_Value_Temp | 2 bytes |
| 516 | Summer Compensation: Setpoint value | Output | R-CT | [9.1] DPT_Value_Temp | 2 bytes |
| 517 | Summer Compensation: Block (1 = Blocking) | Input | -WC- | [1.1] DPT_Switch | 1 bit |
| 521 | Humidity controller: Block (1: block) | Input | -WC- | [1.2] DPT_Bool | 1 bit |
| 522 | Humidity controller: Setpoint value | Input/ Output | RWCT | [9,007] DPT_Value_Humidity | 2 bytes |
| 523 | Humidity controller: Setpoint value (1:+ 0:-) | Input | -WC- | [1.2] DPT_Bool | 1 bit |
| 524 | Humidity controller: Control variable dehumidification | Output | R-CT | [5.1] DPT_Scaling | 1 byte |
| 525 | Humidity controller: Control variable dehumidification level 2 | Output | R-CT | [5.1] DPT_Scaling | 1 byte |
| 526 | Humidity controller: Control variable humidification | Output | R-CT | [5.1] DPT_Scaling | 1 byte |
| 527 | Humidity controller: Dehumidification status (1:ON 0:OFF) | Output | R-CT | [1.1] DPT_Switch | 1 bit |
| 528 | Humidity controller: Dehumidification 2 status (1:ON 0:OFF) | Output | R-CT | [1.1] DPT_Switch | 1 bit |
| 529 | Humidity controller: Humidification status (1:ON 0:OFF) | Output | R-CT | [1.1] DPT_Switch | 1 bit |
| 1111 | Control variable comparator 1: Input 1 | Input | -WC- | [5.1] DPT_Scaling | 1 byte |
| 1112 | Control variable comparator 1: Input 2 | Input | -WC- | [5.1] DPT_Scaling | 1 byte |
| 1113 | Control variable comparator 1: Input 3 | Input | -WC- | [5.1] DPT_Scaling | 1 byte |
| 1114 | Control variable comparator 1: Input 4 | Input | -WC- | [5.1] DPT_Scaling | 1 byte |
| 1115 | Control variable comparator 1: Input 5 | Input | -WC- | [5.1] DPT_Scaling | 1 byte |

| No. | Text | Function | Flags | DPT type | Size |
|------|--|----------|-------|-------------------|--------|
| 1116 | Control variable comparator 1: Output | Output | R-CT | [5.1] DPT_Scaling | 1 byte |
| 1117 | Control variable comparator 1: Block: block) | Output | -WC- | [1.2] DPT_Bool | 1 bit |
| 1118 | Control variable comparator 2: Input 1 | Input | -WC- | [5.1] DPT_Scaling | 1 byte |
| 1119 | Control variable comparator 2: Input 2 | Input | -WC- | [5.1] DPT_Scaling | 1 byte |
| 1120 | Control variable comparator 2: Input 3 | Input | -WC- | [5.1] DPT_Scaling | 1 byte |
| 1121 | Control variable comparator 2: Input 4 | Input | -WC- | [5.1] DPT_Scaling | 1 byte |
| 1122 | Control variable comparator 2: Input 5 | Input | -WC- | [5.1] DPT_Scaling | 1 byte |
| 1123 | Control variable comparator 2: Output | Output | R-CT | [5.1] DPT_Scaling | 1 byte |
| 1124 | Control variable comparator 2: Block (1: block) | Output | -WC- | [1.2] DPT_Bool | 1 bit |
| 1125 | Control variable comparator 3: Input 1 | Input | -WC- | [5.1] DPT_Scaling | 1 byte |
| 1126 | Control variable comparator 3: Input 2 | Input | -WC- | [5.1] DPT_Scaling | 1 byte |
| 1127 | Control variable comparator 3: Input 3 | Input | -WC- | [5.1] DPT_Scaling | 1 byte |
| 1128 | Control variable comparator 3: Input 4 | Input | -WC- | [5.1] DPT_Scaling | 1 byte |
| 1129 | Control variable comparator 3: Input 5 | Input | -WC- | [5.1] DPT_Scaling | 1 byte |
| 1130 | Control variable comparator 3: Output | Output | R-CT | [5.1] DPT_Scaling | 1 byte |
| 1131 | Control variable comparator 3: Block (1: block) | Output | -WC- | [1.2] DPT_Bool | 1 bit |
| 1132 | Control variable comparator 4: Input 1 | Input | -WC- | [5.1] DPT_Scaling | 1 byte |
| 1133 | Control variable comparator 4: Input 2 | Input | -WC- | [5.1] DPT_Scaling | 1 byte |
| 1134 | Control variable comparator 4: Input 3 | Input | -WC- | [5.1] DPT_Scaling | 1 byte |
| 1135 | Control variable comparator 4: Input 4 | Input | -WC- | [5.1] DPT_Scaling | 1 byte |
| 1136 | Control variable comparator 4: Input 5 | Input | -WC- | [5.1] DPT_Scaling | 1 byte |

| No. | Text | Function | Flags | DPT type | Size |
|------|---|----------|-------|-------------------------|----------|
| 1137 | Control variable comparator 4: Output | Output | R-CT | [5.1] DPT_Scaling | 1 byte |
| 1138 | Control variable comparator 4: Block (1: block) | Output | -WC- | [1.2] DPT_Bool | 1 bit |
| 1141 | Computer 1: Input I1 | Input | RWCT | Dep. on setting | 4 bytes |
| 1142 | Computer 1: Input I2 | Input | RWCT | Dep. on setting | 4 bytes |
| 1143 | Computer 1: Input I3 | Input | RWCT | Dep. on setting | 4 bytes |
| 1144 | Computer 1: Output O1 | Output | R-CT | Dep. on setting | 4 bytes |
| 1145 | Computer 1: Output O2 | Output | R-CT | Dep. on setting | 4 bytes |
| 1146 | Computer 1: Condition text | Output | R-CT | [16.0] DPT_String_ASCII | 14 bytes |
| 1147 | Computer 1: Monitoring status | Output | R-CT | [1.1] DPT_Switch | 1 bit |
| 1148 | Computer 1: Block (1: block) | Input | -WC- | [1.1] DPT_Switch | 1 bit |
| 1149 | Computer 2: Input I1 | Input | RWCT | Dep. on setting | 4 bytes |
| 1150 | Computer 2: Input I2 | Input | RWCT | Dep. on setting | 4 bytes |
| 1151 | Computer 2: Input I3 | Input | RWCT | Dep. on setting | 4 bytes |
| 1152 | Computer 2: Output O1 | Output | R-CT | Dep. on setting | 4 bytes |
| 1153 | Computer 2: Output O2 | Output | R-CT | Dep. on setting | 4 bytes |
| 1154 | Computer 2: Condition text | Output | R-CT | [16.0] DPT_String_ASCII | 14 bytes |
| 1155 | Computer 2: Monitoring status | Output | R-CT | [1.1] DPT_Switch | 1 bit |
| 1156 | Computer 2: Block (1: block) | Input | -WC- | [1.1] DPT_Switch | 1 bit |
| 1157 | Computer 3: Input I1 | Input | RWCT | Dep. on setting | 4 bytes |
| 1158 | Computer 3: Input I2 | Input | RWCT | Dep. on setting | 4 bytes |
| 1159 | Computer 3: Input I3 | Input | RWCT | Dep. on setting | 4 bytes |
| 1160 | Computer 3: Output O1 | Output | R-CT | Dep. on setting | 4 bytes |
| 1161 | Computer 3: Output O2 | Output | R-CT | Dep. on setting | 4 bytes |
| 1162 | Computer 3: Condition text | Output | R-CT | [16.0] DPT_String_ASCII | 14 bytes |
| 1163 | Computer 3: Monitoring status | Output | R-CT | [1.1] DPT_Switch | 1 bit |
| 1164 | Computer 3: Block (1: block) | Input | -WC- | [1.1] DPT_Switch | 1 bit |
| 1165 | Computer 4: Input I1 | Input | RWCT | Dep. on setting | 4 bytes |
| 1166 | Computer 4: Input I2 | Input | RWCT | Dep. on setting | 4 bytes |
| 1167 | Computer 4: Input I3 | Input | RWCT | Dep. on setting | 4 bytes |
| 1168 | Computer 4: Output O1 | Output | R-CT | Dep. on setting | 4 bytes |
| 1169 | Computer 4: Output O2 | Output | R-CT | Dep. on setting | 4 bytes |
| 1170 | Computer 4: Condition text | Output | R-CT | [16.0] DPT_String_ASCII | 14 bytes |
| 1171 | Computer 4: Monitoring status | Output | R-CT | [1.1] DPT_Switch | 1 bit |
| 1172 | Computer 4: Block (1: block) | Input | -WC- | [1.1] DPT_Switch | 1 bit |
| 1173 | Computer 5: Input I1 | Input | RWCT | Dep. on setting | 4 bytes |

| No. | Text | Function | Flags | DPT type | Size |
|------|-------------------------------|----------|-------|----------------------------|----------|
| 1174 | Computer 5: Input I2 | Input | RWCT | Dep. on setting | 4 bytes |
| 1175 | Computer 5: Input I3 | Input | RWCT | Dep. on setting | 4 bytes |
| 1176 | Computer 5: Output O1 | Output | R-CT | Dep. on setting | 4 bytes |
| 1177 | Computer 5: Output O2 | Output | R-CT | Dep. on setting | 4 bytes |
| 1178 | Computer 5: Condition text | Output | R-CT | [16.0] DPT_String_ASCII | 14 bytes |
| 1179 | Computer 5: Monitoring status | Output | R-CT | [1.1] DPT_Switch | 1 bit |
| 1180 | Computer 5: Block (1: block) | Input | -WC- | [1.1] DPT_Switch | 1 bit |
| 1181 | Computer 6: Input I1 | Input | RWCT | Dep. on setting | 4 bytes |
| 1182 | Computer 6: Input I2 | Input | RWCT | Dep. on setting | 4 bytes |
| 1183 | Computer 6: Input I3 | Input | RWCT | Dep. on setting | 4 bytes |
| 1184 | Computer 6: Output O1 | Output | R-CT | Dep. on setting | 4 bytes |
| 1185 | Computer 6: Output O2 | Output | R-CT | Dep. on setting | 4 bytes |
| 1186 | Computer 6: Condition text | Output | R-CT | [16.0] DPT_String_ASCII | 14 bytes |
| 1187 | Computer 6: Monitoring status | Output | R-CT | [1.1] DPT_Switch | 1 bit |
| 1188 | Computer 6: Block (1: block) | Input | -WC- | [1.1] DPT_Switch | 1 bit |
| 1189 | Computer 7: Input I1 | Input | RWCT | Dep. on setting | 4 bytes |
| 1190 | Computer 7: Input I2 | Input | RWCT | Dep. on setting | 4 bytes |
| 1191 | Computer 7: Input I3 | Input | RWCT | Dep. on setting | 4 bytes |
| 1192 | Computer 7: Output O1 | Output | R-CT | Dep. on setting | 4 bytes |
| 1193 | Computer 7: Output O2 | Output | R-CT | Dep. on setting | 4 bytes |
| 1194 | Computer 7: Condition text | Output | R-CT | [16.0] DPT_String_ASCII | 14 bytes |
| 1195 | Computer 7: Monitoring status | Output | R-CT | [1.1] DPT_Switch | 1 bit |
| 1196 | Computer 7: Block (1: block) | Input | -WC- | [1.1] DPT_Switch | 1 bit |
| 1197 | Computer 8: Input I1 | Input | RWCT | Dep. on setting | 4 bytes |
| 1198 | Computer 8: Input I2 | Input | RWCT | Dep. on setting | 4 bytes |
| 1199 | Computer 8: Input I3 | Input | RWCT | Dep. on setting | 4 bytes |
| 1200 | Computer 8: Output O1 | Output | R-CT | Dep. on setting | 4 bytes |
| 1201 | Computer 8: Output O2 | Output | R-CT | Dep. on setting | 4 bytes |
| 1202 | Computer 8: Condition text | Output | R-CT | [16.0] DPT_String_ASCII | 14 bytes |
| 1203 | Computer 8: Monitoring status | Output | R-CT | [1.1] DPT_Switch | 1 bit |
| 1204 | Computer 8: Block (1: block) | Input | -WC- | [1.1] DPT_Switch | 1 bit |
| 1391 | Logic input 1 | Input | -WC- | [1.2] DPT_Bool | 1 bit |
| 1392 | Logic input 2 | Input | -WC- | [1.2] DPT_Bool | 1 bit |
| 1393 | Logic input 3 | Input | -WC- | [1.2] DPT_Bool | 1 bit |
| 1394 | Logic input 4 | Input | -WC- | [1.2] DPT_Bool | 1 bit |
| 1395 | Logic input 5 | Input | -WC- | [1.2] DPT_Bool | 1 bit |

| No. | Text | Function | Flags | DPT type | Size |
|------|-------------------------------------|----------|-------|--------------------------------|--------|
| 1396 | Logic input 6 | Input | -WC- | [1.2] DPT_Bool | 1 bit |
| 1397 | Logic input 7 | Input | -WC- | [1.2] DPT_Bool | 1 bit |
| 1398 | Logic input 8 | Input | -WC- | [1.2] DPT_Bool | 1 bit |
| 1399 | Logic input 9 | Input | -WC- | [1.2] DPT_Bool | 1 bit |
| 1400 | Logic input 10 | Input | -WC- | [1.2] DPT_Bool | 1 bit |
| 1401 | Logic input 11 | Input | -WC- | [1.2] DPT_Bool | 1 bit |
| 1402 | Logic input 12 | Input | -WC- | [1.2] DPT_Bool | 1 bit |
| 1403 | Logic input 13 | Input | -WC- | [1.2] DPT_Bool | 1 bit |
| 1404 | Logic input 14 | Input | -WC- | [1.2] DPT_Bool | 1 bit |
| 1405 | Logic input 15 | Input | -WC- | [1.2] DPT_Bool | 1 bit |
| 1406 | Logic input 16 | Input | -WC- | [1.2] DPT_Bool | 1 bit |
| 1411 | AND logic 1: 1-bit switching output | Output | R-CT | [1.2] DPT_Bool | 1 bit |
| 1412 | AND logic 1: 8-bit output A | Output | R-CT | [5.10] DPT_- Value_1_Ucount | 1 byte |
| 1413 | AND logic 1: 8-bit output B | Output | R-CT | [5.10] DPT_- Value_1_Ucount | 1 byte |
| 1414 | AND logic 1: Block | Input | -WC- | [1.1] DPT_Switch | 1 bit |
| 1415 | AND logic 2: 1-bit switching output | Output | R-CT | [1.2] DPT_Bool | 1 bit |
| 1416 | AND logic 2: 8-bit output A | Output | R-CT | [5.10] DPT_- Value_1_Ucount | 1 byte |
| 1417 | AND logic 2: 8-bit output B | Output | R-CT | [5.10] DPT_- Value_1_Ucount | 1 byte |
| 1418 | AND logic 2: Block | Input | -WC- | [1.1] DPT_Switch | 1 bit |
| 1419 | AND logic 3: 1-bit switching output | Output | R-CT | [1.2] DPT_Bool | 1 bit |
| 1420 | AND logic 3: 8-bit output A | Output | R-CT | [5.10] DPT_- Value_1_Ucount | 1 byte |
| 1421 | AND logic 3: 8-bit output B | Output | R-CT | [5.10] DPT_- Value_1_Ucount | 1 byte |
| 1422 | AND logic 3: Block | Input | -WC- | [1.1] DPT_Switch | 1 bit |
| 1423 | AND logic 4: 1-bit switching output | Output | R-CT | [1.2] DPT_Bool | 1 bit |
| 1424 | AND logic 4: 8-bit output A | Output | R-CT | [5.10] DPT_- Value_1_Ucount | 1 byte |
| 1425 | AND logic 4: 8-bit output B | Output | R-CT | [5.10] DPT_- Value_1_Ucount | 1 byte |
| 1426 | AND logic 4: Block | Input | -WC- | [1.1] DPT_Switch | 1 bit |
| 1427 | AND logic 5: 1-bit switching output | Output | R-CT | [1.2] DPT_Bool | 1 bit |
| 1428 | AND logic 5: 8-bit output A | Output | R-CT | [5.10] DPT_- Value_1_Ucount | 1 byte |
| 1429 | AND logic 5: 8-bit output B | Output | R-CT | [5.10] DPT_- Value_1_Ucount | 1 byte |
| 1430 | AND logic 5: Block | Input | -WC- | [1.1] DPT_Switch | 1 bit |

| No. | Text | Function | Flags | DPT type | Size |
|------|-------------------------------------|----------|-------|----------------------------|--------|
| 1431 | AND logic 6: 1-bit switching output | Output | R-CT | [1.2] DPT_Bool | 1 bit |
| 1432 | AND logic 6: 8-bit output A | Output | R-CT | [5.10] DPT_-Value_1_Ucount | 1 byte |
| 1433 | AND logic 6: 8-bit output B | Output | R-CT | [5.10] DPT_-Value_1_Ucount | 1 byte |
| 1434 | AND logic 6: Block | Input | -WC- | [1.1] DPT_Switch | 1 bit |
| 1435 | AND logic 7: 1-bit switching output | Output | R-CT | [1.2] DPT_Bool | 1 bit |
| 1436 | AND logic 7: 8-bit output A | Output | R-CT | [5.10] DPT_-Value_1_Ucount | 1 byte |
| 1437 | AND logic 7: 8-bit output B | Output | R-CT | [5.10] DPT_-Value_1_Ucount | 1 byte |
| 1438 | AND logic 7: Block | Input | -WC- | [1.1] DPT_Switch | 1 bit |
| 1439 | AND logic 8: 1-bit switching output | Output | R-CT | [1.2] DPT_Bool | 1 bit |
| 1440 | AND logic 8: 8-bit output A | Output | R-CT | [5.10] DPT_-Value_1_Ucount | 1 byte |
| 1441 | AND logic 8: 8-bit output B | Output | R-CT | [5.10] DPT_-Value_1_Ucount | 1 byte |
| 1442 | AND logic 8: Block | Input | -WC- | [1.1] DPT_Switch | 1 bit |
| 1443 | OR logic 1: 1-bit switching output | Output | R-CT | [1.2] DPT_Bool | 1 bit |
| 1444 | OR logic 1: 8-bit output A | Output | R-CT | [5.10] DPT_-Value_1_Ucount | 1 byte |
| 1445 | OR logic 1: 8-bit output B | Output | R-CT | [5.10] DPT_-Value_1_Ucount | 1 byte |
| 1446 | OR logic 1: Block | Input | -WC- | [1.1] DPT_Switch | 1 bit |
| 1447 | OR logic 2: 1-bit switching output | Output | R-CT | [1.2] DPT_Bool | 1 bit |
| 1448 | OR logic 2: 8-bit output A | Output | R-CT | [5.10] DPT_-Value_1_Ucount | 1 byte |
| 1449 | OR logic 2: 8-bit output B | Output | R-CT | [5.10] DPT_-Value_1_Ucount | 1 byte |
| 1450 | OR logic 2: Block | Input | -WC- | [1.1] DPT_Switch | 1 bit |
| 1451 | OR logic 3: 1-bit switching output | Output | R-CT | [1.2] DPT_Bool | 1 bit |
| 1452 | OR logic 3: 8-bit output A | Output | R-CT | [5.10] DPT_-Value_1_Ucount | 1 byte |
| 1453 | OR logic 3: 8-bit output B | Output | R-CT | [5.10] DPT_-Value_1_Ucount | 1 byte |
| 1454 | OR logic 3: Block | Input | -WC- | [1.1] DPT_Switch | 1 bit |
| 1455 | OR logic 4: 1-bit switching output | Output | R-CT | [1.2] DPT_Bool | 1 bit |
| 1456 | OR logic 4: 8-bit output A | Output | R-CT | [5.10] DPT_-Value_1_Ucount | 1 byte |
| 1457 | OR logic 4: 8-bit output B | Output | R-CT | [5.10] DPT_-Value_1_Ucount | 1 byte |
| 1458 | OR logic 4: Block | Input | -WC- | [1.1] DPT_Switch | 1 bit |

| No. | Text | Function | Flags | DPT type | Size |
|------|------------------------------------|----------|-------|----------------------------|--------|
| 1459 | OR logic 5: 1-bit switching output | Output | R-CT | [1.2] DPT_Bool | 1 bit |
| 1460 | OR logic 5: 8-bit output A | Output | R-CT | [5.10] DPT_-Value_1_Ucount | 1 byte |
| 1461 | OR logic 5: 8-bit output B | Output | R-CT | [5.10] DPT_-Value_1_Ucount | 1 byte |
| 1462 | OR logic 5: Block | Input | -WC- | [1.1] DPT_Switch | 1 bit |
| 1463 | OR logic 6: 1-bit switching output | Output | R-CT | [1.2] DPT_Bool | 1 bit |
| 1464 | OR logic 6: 8-bit output A | Output | R-CT | [5.10] DPT_-Value_1_Ucount | 1 byte |
| 1465 | OR logic 6: 8-bit output B | Output | R-CT | [5.10] DPT_-Value_1_Ucount | 1 byte |
| 1466 | OR logic 6: Block | Input | -WC- | [1.1] DPT_Switch | 1 bit |
| 1467 | OR logic 7: 1-bit switching output | Output | R-CT | [1.2] DPT_Bool | 1 bit |
| 1468 | OR logic 7: 8-bit output A | Output | R-CT | [5.10] DPT_-Value_1_Ucount | 1 byte |
| 1469 | OR logic 7: 8-bit output B | Output | R-CT | [5.10] DPT_-Value_1_Ucount | 1 byte |
| 1470 | OR logic 7: Block | Input | -WC- | [1.1] DPT_Switch | 1 bit |
| 1471 | OR logic 8: 1-bit switching output | Output | R-CT | [1.2] DPT_Bool | 1 bit |
| 1472 | OR logic 8: 8-bit output A | Output | R-CT | [5.10] DPT_-Value_1_Ucount | 1 byte |
| 1473 | OR logic 8: 8-bit output B | Output | R-CT | [5.10] DPT_-Value_1_Ucount | 1 byte |
| 1474 | OR logic 8: Block | Input | -WC- | [1.1] DPT_Switch | 1 bit |

6. Parameter setting

6.1. Behaviour on power failure/ restoration of power

Behaviour following a failure of the bus power supply:

The device sends nothing.

Behaviour on bus restoration of power and following programming or reset:

The device sends all outputs according to their send behaviour set in the parameters with the delays established in the "General settings" parameter block.

6.2. General settings

Set basic characteristics for the data transfer.

| Send delay after power-up and programming for: | |
|--|--|
| Measured values | <u>5 s</u> • ... • 2 h |
| Threshold values and switching outputs | <u>5 s</u> • ... • 2 h |
| Controller objects | <u>5 s</u> • ... • 2 h |
| Comparator and computer objects | <u>5 s</u> • ... • 2 h |
| Logic objects | <u>5 s</u> • ... • 2 h |
| Maximum telegram rate | <ul style="list-style-type: none"> • 1 message per second • ... • <u>5 messages per second</u> • ... • 20 messages per second |

6.3. Temperature Measurement

Select, whether a **malfunction object** is to be sent if the sensor is faulty.

| | |
|------------------------|-----------------|
| Use malfunction object | <u>No</u> • Yes |
|------------------------|-----------------|

Use **Offsets** to adjust the readings to be sent.

| | |
|-----------------|--------------------|
| Offset in 0.1°C | -50...50; <u>0</u> |
|-----------------|--------------------|

The unit can calculate a **mixed value** from its own reading and an external value. Set the mixed value calculation if desired. If an external portion is used, all of the following settings (threshold values, etc.) are related to the overall reading.

| | |
|--|--|
| Use external measured value | <u>No</u> • Yes |
| Ext. Reading proportion of the total reading | 5% • 10% • ... • <u>50%</u> • ... • 100% |

| | |
|---|---|
| Sending pattern for internal and total measured value | <ul style="list-style-type: none"> • <u>never</u> • periodically • on change • on change and periodically |
| At and above change of (if sent on change) | 0.1°C • 0.2°C • <u>0.5°C</u> • ... • 5.0°C |
| Send cycle (if sent periodically) | 5 s • <u>10 s</u> • ... • 2 h |

The **minimum and maximum readings** can be saved and sent to the bus. Use the "Reset temperature min/max. value" objects to reset the values to the current readings. The values are not retained after a reset.

| | |
|-------------------------------|-----------------|
| Use minimum and maximum value | <u>No</u> • Yes |
|-------------------------------|-----------------|

6.4. Temperature threshold values

Activate the required temperature threshold values. The menus for setting the threshold values are displayed.

| | |
|-----------------------------|-----------------|
| Use threshold value 1/2/3/4 | Yes • <u>No</u> |
|-----------------------------|-----------------|

6.4.1. Threshold value 1, 2, 3, 4

Threshold value

Set, in which cases **threshold values and delay times** received via object are to be retained. The parameter is only taken into consideration if the setting via object is activated below. Please note that the setting "After power supply restoration and programming" should not be used for the initial start-up, as the factory settings are always used until the first communication (setting via objects is ignored).

| | |
|---|--|
| Maintain the threshold values and delays received via communication objects | <ul style="list-style-type: none"> • <u>never</u> • after power supply restoration • after power supply restoration and programming |
|---|--|

Set the threshold value directly in the application program using parameters, or define them via the bus using a communication object.

Threshold value setting via parameter:

Set the threshold values and hysteresis directly.

| | |
|-----------------------------|--|
| Threshold value setting via | Parameter • Communication objects |
| Threshold value in 0.1°C | -300 ... 800; <u>200</u> |

Threshold value setting via a communication object:

Define, how the threshold value is to be received from the bus. Basically, a new value can be received, or simply a command to increase or decrease.

During initial commissioning, a threshold value must be defined, which will be valid until the first communication with a new threshold value. For units which have already been taken into service, the last communicated threshold value can be used. Basically, a temperature range is given, in which the threshold value can be changed (object value limit).

A set threshold value will be retained until a new value or a change is transferred. The current value is saved, so that it is retained in the event of a power supply failure and will be available once the power supply is restored.

| | |
|--|---|
| Threshold value setting via | Parameter • Communication objects |
| Start threshold value in 0.1°C valid until first communication | -300 ... 800; <u>200</u> |
| Object value limit (min) in 0.1°C | <u>-300</u> ...800 |
| Object value limit (max) in 0.1°C | -300... <u>800</u> |
| Type of threshold value change | <u>Absolute value</u> • Increase/decrease |
| Increment (upon increase/decrease change) | <u>0.1°C</u> • ... • 5°C |

Set the **hysteresis** independent of the type of threshold value specification.

| | |
|--|------------------------|
| Hysteresis setting | in % • <u>absolute</u> |
| Hysteresis in 0.1° | 0...1100; <u>50</u> |
| Hysteresis in % of the threshold value | 0 ... 50; <u>20</u> |

Switching output

Set the behaviour of the switching output when a threshold value is exceeded/undercut. The output switching delay can be set using objects or directly as a parameter.

| | |
|--|--|
| When the following conditions apply, the output is (TV = Threshold value) | <ul style="list-style-type: none"> • <u>TV above = 1</u> TV - hyst. below = 0 • <u>TV above = 0</u> TV - hyst. below = 1 • <u>TV below = 1</u> TV + hyst. above = 0 • <u>TV below = 0</u> TV + hyst. above = 1 |
| Delays can be set via objects (in seconds) | <u>No</u> • Yes |
| Switching delay from 0 to 1 (If delay can be set via objects: valid until 1st communication) | <u>None</u> • 1 s • 2 s • 5 s • 10 s • ... • 2 h |
| Switching delay from 1 to 0 (If delay can be set via objects: valid until 1st communication) | <u>None</u> • 1 s • 2 s • 5 s • 10 s • ... • 2 h |

| | |
|--|--|
| Switching output sends | <ul style="list-style-type: none"> • <u>on change</u> • on change to 1 • on change to 0 • on change and periodically • on change to 1 and periodically • on change to 0 and periodically |
| Cycle <i>(only if sending periodically is selected)</i> | <u>5 s</u> • 10 s • 30 s... • 2 h |

Block

The switching output can be blocked using an object.

| | |
|----------------------------|-----------------|
| Use switching output block | <u>No</u> • Yes |
|----------------------------|-----------------|

If the block is activated, define specifications here for the behaviour of the output when blocked.

| | |
|---|---|
| Analysis of the blocking object | <ul style="list-style-type: none"> • <u>At value 1: block At value 0: release</u> • At value 0: block At value 1: release |
| Blocking object value before 1st communication | <u>0</u> • 1 |
| Behaviour of the switching output | |
| On block | <ul style="list-style-type: none"> • <u>Do not send message</u> • send 0 • send 1 |
| On release <i>(with 2 seconds release delay)</i> | [Dependent on the "Switching output sends" setting] |

The behaviour of the switching output on release is dependent on the value of the parameter "Switching output sends" (see "Switching output")

| | |
|--|---|
| Switching output sends on change | <ul style="list-style-type: none"> • Do not send message • Send switching output status |
| Switching output sends on change to 1 | <ul style="list-style-type: none"> • Do not send message • if switching output = 1 → send 1 |
| Switching output sends on change to 0 | <ul style="list-style-type: none"> • Do not send message • if switching output = 0 → send 0 |
| Switching output sends on change and periodically | Send switching output status |
| Switching output sends on change to 1 and periodically | if switching output = 1 → send 1 |
| Switching output sends on change to 0 and periodically | if switching output = 0 → send 0 |

6.5. Temperature PI control

Activate the control if you want to use it.

| | |
|-------------|-----------------|
| Use control | <u>No</u> • Yes |
|-------------|-----------------|

General control

Set, in which cases **setpoint values and extension time** received via object are to be retained. The parameter is only taken into consideration if the setting via object is activated below. Please note that the setting "After power supply restoration and programming" should not be used for the initial start-up, as the factory settings are always used until the 1st communication (setting via objects is ignored).

| | |
|---|--|
| Maintain the | |
| Target values and extension time received via communication objects | <ul style="list-style-type: none"> • never • <u>after power supply restoration</u> • after power supply restoration and programming |
| | |

For an adequate regulation of the ambient temperature, comfort, standby, eco and building protection modes may be used.

Comfort when present,

Standby during short absences,

Eco as a night-time mode and

Frost/heat protection (building protection) e. g. with the window open.

The settings for the temperature control include the setpoint temperatures for the individual modes. Objects are used to determine which mode is to be selected. A change of mode may be triggered manually or automatically (e.g. by a timer, window contact).

The **mode** may be switched with two 8 bit objects of different priority. Objects

„... HVAC mode (Prio 2)“ for switching in everyday operation and

„... HVAC mode (Prio 1)“ for central switching with higher priority.

The objects are coded as follows:

0 = Auto

1 = Comfort

2 = Standby

3 = Eco

4 = Building Protection

Alternatively, you can use three objects, with one object switching between eco and standby mode and the two others activating comfort mode and frost/heat protection mode respectively. The comfort object blocks the eco/standby object, and the frost/heat protection object has the highest priority. Objects

„... Mode (1: Eco, 0: Standby)“,

„... comfort activation mode“ and

„... frost/heat protection activation mode“

| | |
|-----------------|---|
| Switch mode via | <ul style="list-style-type: none"> • two 8 Bit objects (HVAC Modes) • three 1 bit objects |
|-----------------|---|

Select the **mode to be activated after reset** (e.g. power failure, reset of the line via the bus) (Default).

Then configure a temperature control **block** via the blocking object.

| | |
|---|---|
| Mode after reset | <ul style="list-style-type: none"> • <u>Comfort</u> • <u>Standby</u> • <u>Eco</u> • Building protection |
| Behaviour of the blocking object with value | <ul style="list-style-type: none"> • <u>1 = Block 0 = release</u> • <u>0 = block 1 = release</u> |
| Value of the blocking object after reset | <u>0</u> • 1 |

Specify when the current **control variables** of the controller are to be **sent** to the bus. Periodic sending is safer, in case a message does not reach a recipient. You may also set up periodical monitoring by the actuator with this setting.

| | |
|---------------------------------|--|
| Send control variable | <ul style="list-style-type: none"> • <u>on change</u> • on change and periodically |
| from change (in % absolute) | 1...10; <u>2</u> |
| Cycle (if sent periodically) | 5 s • ... • <u>5 min</u> • ... • 2 h |

The **status object** reports the current status of the control variables (0% = OFF, >0% = ON) and may for example be used for visualisation, or to switch off the heating pump as soon as the heating is switched off.

| | |
|---------------------------------|--|
| Send status objects | <ul style="list-style-type: none"> • <u>on change</u> • on change to 1 • on change to 0 • on change and periodically • on change to 1 and periodically • on change to 0 and periodically |
| Cycle (if sent periodically) | 5 s • ... • <u>5 min</u> • ... • 2 h |

Then define the **type of control**. Heating and/or cooling may be controlled in two levels.

| | |
|-----------------|--|
| Type of control | <ul style="list-style-type: none"> • <u>Single level heating</u> • Dual-level heating • Single-level cooling • Dual-level cooling • Single-level heating + single-level cooling • Dual-level heating + single-level cooling • Dual-level heating + dual-level cooling |
|-----------------|--|

General setpoint values

You may enter separate setpoint values for each mode or use the comfort setpoint as a basic value.

If you are using the control for both heating *and* cooling, you may also select the setting "separately with switching object". Systems used for cooling in summer and for heating in winter can thus be switched from one to the other.

If you are using the basic value, only the deviation from the comfort setpoint value is listed for the other modes (e.g. 2°C less for standby mode).

| | |
|---|---|
| Setting the setpoint values | <ul style="list-style-type: none"> • <u>with separate setpoint values with Switching object</u> • with separate setpoint values without Switching object • with comfort setpoint as a basis with Switching object • with comfort setpoint as a basis without Switching object |
| Behaviour of the switching object at value (with switching object) | <ul style="list-style-type: none"> • 0 = Heating 1 = Cooling • 1 = Heating 0 = Cooling |
| Value of the switching object after reset (with switching object) | <u>0</u> • 1 |

The **increment** for the setpoint changes is predefined. Whether the change only remains temporarily active (not saved) or is also retained after power supply restoration (and programming), is specified in the first section of "General control". This also applies to a comfort extension.

| | |
|---|---------------------|
| Increment for setpoint changes (in 0.1 °C) | 1 ... 50; <u>10</u> |
|---|---------------------|

The control may be reset to comfort mode from eco mode, which is used as night mode, via the comfort extension. This allows the user to maintain the comfort setpoint value for a longer time, e.g. when having guests. The duration of this comfort extension period is set. After the comfort extension period expires, the system returns to eco mode.

| | |
|--|------------------------|
| Comfort extension time in seconds (can only be activated from eco mode) | 1...36000; <u>3600</u> |
|--|------------------------|

Comfort Setpoint

Comfort mode is usually used for daytime mode when people are present. A starting value is defined for the comfort setpoint as well as a temperature range in which the setpoint value may be modified.

| | |
|--|------------------------|
| Starting heating/cooling setpoint (in 0.1 °C) valid until 1st communication (not upon saving the setpoint value after programming) | -300...800; <u>210</u> |
|--|------------------------|

If setpoint values are entered separately:

| | |
|--|------------------------|
| Min. object value heating/cooling (in 0.1 °C) | -300...800; <u>160</u> |
|--|------------------------|

| | |
|--|------------------------|
| Max. object value heating/cooling (in 0.1 °C) | -300...800; <u>280</u> |
|--|------------------------|

If the comfort setpoint value is used as a basis:

If the comfort setpoint value is used as a basis, the reduction/increment of the value is set.

| | |
|----------------------------------|------------------------|
| Minimum base setpoint (in 0.1°C) | -300...800; <u>160</u> |
| Maximum base setpoint (in 0.1°C) | -300...800; <u>280</u> |
| Reduction by up to (in 0.1°C) | 0...200; <u>50</u> |
| Increase by up to (in 0.1°C) | 0...200; <u>50</u> |

If the comfort setpoint is used as the basis without a switching object, a dead zone is specified for the control mode "heating *and* cooling" to avoid direct switching from heating to cooling.

| | |
|--|--------------------|
| Dead zone between heating and cooling (only if both heating AND cooling are used) | 1...100; <u>50</u> |
|--|--------------------|

Standby setpoint

Standby mode is usually used for daytime mode when people are absent.

If setpoint values are entered separately:

A starting setpoint value is defined as well as a temperature range in which the setpoint value may be changed.

| | |
|--|------------------------|
| Starting heating/cooling setpoint (in 0.1 °C) valid until 1st communication | -300...800; <u>210</u> |
| Min. object value heating/cooling (in 0.1 °C) | -300...800; <u>160</u> |
| Max. object value heating/cooling (in 0.1 °C) | -300...800; <u>280</u> |

If the comfort setpoint value is used as a basis:

If the comfort setpoint value is used as a basis, the reduction/increment of the value is set.

| | |
|---|--------------------|
| Reduce heating setpoint (in 0.1°C) (for heating) | 0...200; <u>30</u> |
| Increase cooling setpoint (in 0.1°C) (for cooling) | 0...200; <u>30</u> |

Eco setpoint

Eco mode is usually used for night mode.

If setpoint values are entered separately:

A starting setpoint value is defined as well as a temperature range in which the setpoint value may be changed.

| | |
|--|------------------------|
| Starting heating/cooling setpoint (in 0.1 °C) valid until 1st communication | -300...800; <u>210</u> |
| Min. object value heating/cooling (in 0.1 °C) | -300...800; <u>160</u> |
| Max. object value heating/cooling (in 0.1 °C) | -300...800; <u>280</u> |

If the comfort setpoint value is used as a basis:

If the comfort setpoint value is used as a basis, the reduction/increment of the value is set.

| | |
|---|--------------------|
| Reduce heating setpoint (in 0.1°C) (for heating) | 0...200; <u>50</u> |
| Increase cooling setpoint (in 0.1°C) (for cooling) | 0...200; <u>60</u> |

Setpoint values for frost/heat protection (building protection)

The building protection mode is for example used as long as windows are opened for ventilation. Setpoints for frost protection (heating) and heat protection (cooling) are determined which may not be modified from outside (no access via operating devices etc.). The building protection mode may be activated with delay, which allows you to leave the building before the controls switch to frost/heat protection mode.

| | |
|--------------------------------------|--|
| Setpoint frost protection (in 0.1°C) | -300...800; <u>70</u> |
| Activation delay | less than • 5 s • ... • <u>5 min</u> • ... • 2 h |
| Setpoint heat protection (in 0.1°C) | -300...800; <u>350</u> |
| Activation delay | less than • 5 s • ... • <u>5 min</u> • ... • 2 h |

General control variables

This setting appears for the control types "Heating *and* Cooling" only. Here, you can decide whether to use a common control variable for heating and cooling. If the 2nd level has a common control variable, you also determine the control mode of the 2nd level here.

| | |
|---|--|
| For heating and cooling | <ul style="list-style-type: none"> • <u>separate control variables are used</u> • common control variables are used for Level 1 • common control variables are used for Level 2 • common control variable are used for Level 1+2 |
| Use control variable for 4/6-way valve (only for common control variables in level 1) | <u>No</u> • Yes |
| Control type (for level 2 only) | <ul style="list-style-type: none"> • 2-point-control • PI control |

| | |
|--|--|
| Control variable of the 2nd Level is on (only for level 2 with 2 point controlling) | <ul style="list-style-type: none"> • 1 bit object • 8 bit object |
|--|--|

When using the control variable for a 4/6 way valve, the following applies:

0%...100% heating = 66%...100% control variable

OFF = 50% control variable

0%...100% cooling = 33%...0% control variable

6.5.1. Heating control level 1/2

If a heating control mode is configured, one or two setting sections for the heating levels are displayed.

In the 1st level, heating is controlled by a PI control, which allows to either enter control parameters or select predetermined applications.

In the 2nd level (therefore only in case of 2-level heating), heating is controlled via a PI or a 2-point-control.

In level 2, the setpoint difference between the two levels must also be specified, i.e. below which setpoint deviation the second level is added.

| | |
|--|---|
| Setpoint difference between 1st and 2nd level (in 0.1°C) (for level 2) | 0...100; <u>40</u> |
| Control type (for level 2, no common control variables) | <ul style="list-style-type: none"> • 2-point-control • PI control |
| Control variable is a (for level 2 with 2-point controlling, no common control variables) | <ul style="list-style-type: none"> • 1 bit object • 8 bit object |

PI control with control parameters:

This setting allows individual input of the parameters for PI control.

| | |
|------------------------------|---|
| Control type | <ul style="list-style-type: none"> • PI control |
| Setting of the controller by | <ul style="list-style-type: none"> • Controller parameter • specified applications |

Specify the deviation from the setpoint value at which the maximum control variable value is reached, i.e. the point at which maximum heating power is activated.

The reset time shows how quickly the controller responds to deviations from the setpoint value. In case of a short reset time, the control responds with a fast increase of the control variable. In case of a long reset time, the control responds somewhat less urgently and needs longer until the necessary control variable for the setpoint value deviation is reached.

You should set the time appropriate to the heating system at this point (observe manufacturer's instructions).

| | |
|--|--------------------|
| Maximum control variable is reached at setpoint/actual difference of (in °C) | 0.. <u>5</u> |
| Reset time (in min.) | 1...255; <u>30</u> |

Now specify what should be sent when the control is blocked. Set a value greater 0 (=OFF) to receive a basic heating level, e.g. for floor heating.

On release, the control variable follows the rule again.

| | |
|---|---|
| When blocked, the control variable shall | <ul style="list-style-type: none"> • <u>not be sent</u> • send a specific value |
| Value (in %) <i>(if a value is sent)</i> | 0...100 |

In case of a common control variable for heating and cooling, 0 is always transmitted as a fixed value.

PI control with predetermined application:

This setting provides fixed parameters for frequent applications.

| | |
|--|--|
| Control type | <ul style="list-style-type: none"> • PI control |
| Setting of the controller by | <ul style="list-style-type: none"> • Controller parameter • specified applications |
| Application | <ul style="list-style-type: none"> • Warm water heating • Floor heating • Convection unit • Electric heating |
| Maximum control variable is reached at setpoint/actual difference of (in °C) | Warm water heating: 5 Floor heating: 5 Convection unit: 4 Electric heating: 4 |
| Reset time (in min.) | Warm water heating: 150 Floor heating: 240 Convection unit: 90 Electric heating: 100 |

Now specify what should be sent when the control is blocked. Set a value greater 0 (=OFF) to receive a basic heating level, e.g. for floor heating.

On release, the control variable follows the rule again.

| | |
|---|--|
| When blocked, the control variable shall | <ul style="list-style-type: none"> • not be sent • send a specific value |
| Value (in %) <i>(if a value is sent)</i> | 0...100 |

In case of a common control variable for heating and cooling, 0 is always transmitted as a fixed value.

2-point-control (only level 2):

2-point-control is used for systems which are only set to ON or OFF.

| | |
|---|--|
| Control type <i>(is determined at a higher level for common control variables)</i> | <ul style="list-style-type: none"> • 2-point-control |
|---|--|

Enter the hysteresis that prevents frequent on/off switching of temperatures in the threshold range.

| | |
|-----------------------|--------------------|
| Hysteresis (in 0.1°C) | 0...100; <u>20</u> |
|-----------------------|--------------------|

If separate control variables are used, select whether the control variable of the 2nd level is a 1 bit object (on/off) or an 8 bit object (on with percentage/off).

| | |
|------------------------------------|---|
| Control variable is a | <ul style="list-style-type: none"> • <u>1 bit object</u> • 8 bit object |
| Value (in %) (for 8 bit object) | 0... <u>100</u> |

Now specify what should be sent when the control is blocked. Set a value greater 0 (=OFF) to receive a basic heating level, e.g. for floor heating. On release, the control variable follows the rule again.

| | |
|--|--|
| When blocked, the control variable shall | <ul style="list-style-type: none"> • not be sent • send a specific value |
| Value (in %) <i>only if a value is sent</i> | <u>0</u> ...100 |

6.5.2. Cooling control level 1/2

If a cooling control mode is configured, one or two setting sections for the cooling levels are displayed.

In the 1st level, cooling is controlled by a PI control in which either control parameters can be entered or predetermined applications can be selected.

In the 2nd level (therefore only for 2-level cooling), cooling is controlled via a PI or a 2-point-control.

In level 2, the setpoint deviation between the two levels must also be specified, i.e. above which setpoint value deviation the second level is added.

| | |
|--|---|
| Setpoint difference between 1st and 2nd level (in 0.1°C) (for level 2) | 0...100; <u>40</u> |
| Control type (for level 2, no common control variables) | <ul style="list-style-type: none"> • 2-point-control • PI control |
| Control variable is a (for level 2 with 2-point controlling, no common control variables) | <ul style="list-style-type: none"> • <u>1 bit object</u> • 8 bit object |

PI control with control parameters:

This setting allows individual input of the parameters for PI control.

| | |
|------------------------------|---|
| Control type | <ul style="list-style-type: none"> • PI control |
| Setting of the controller by | <ul style="list-style-type: none"> • Controller parameter • specified applications |

Specify the deviation from the setpoint value which reaches maximum variable value, i.e. the point at which maximum cooling power is activated.

The reset time shows how quickly the controller responds to deviations from the setpoint value. In case of a short reset time, the control responds with a fast increase of the control variable. In case of a long reset time, the control responds somewhat less urgently and needs longer until the necessary control variable for the setpoint value deviation is reached. You should set the time appropriate to the cooling system at this point (observe manufacturer's instructions).

| | |
|--|--------------------|
| Maximum control variable is reached at setpoint/actual difference of (in °C) | 0.. <u>5</u> |
| Reset time (in min.) | 1...255; <u>30</u> |

Now specify what should be sent when the control is blocked.

On release, the control variable follows the rule again.

| | |
|--|---|
| When blocked, the control variable shall | <ul style="list-style-type: none"> • <u>not be sent</u> • send a specific value |
| Value (in %) (if a value is sent) | <u>0</u> ...100 |

In case of a common control variable for heating and cooling, 0 is always transmitted as a fixed value.

PI control with predetermined application:

This setting provides fixed parameters for a cooling ceiling

| | |
|--|---|
| Control type | • PI control |
| Setting of the controller by | <ul style="list-style-type: none"> • Controller parameter • specified applications |
| Application | • Cooling ceiling |
| Maximum control variable is reached at setpoint/actual difference of (in °C) | Cooling ceiling: 5 |
| Reset time (in min.) | Cooling ceiling: 30 |

Now specify what should be sent when the control is blocked.

On release, the control variable follows the rule again.

| | |
|--|--|
| When blocked, the control variable shall | <ul style="list-style-type: none"> • not be sent • send a specific value |
| Value (in %) (if a value is sent) | <u>0</u> ...100 |

2-point-control (only level 2):

2-point-control is used for systems which are only set to ON or OFF.

| | |
|---|--------------------------|
| Control type <i>is determined at a higher level for common variables</i> | • 2-point-control |
|---|--------------------------|

Enter the hysteresis that prevents frequent on/off switching of temperatures in the threshold range.

| | |
|-----------------------|--------------------|
| Hysteresis (in 0.1°C) | 0...100; <u>20</u> |
|-----------------------|--------------------|

If separate control variables are used, select whether the control variable of the 2nd level is a 1 bit object (on/off) or an 8 bit object (on with percentage/off).

| | |
|------------------------------------|--|
| Control variable is a | <ul style="list-style-type: none"> • <u>1 bit object</u> • <u>8 bit object</u> |
| Value (in %) (for 8 bit object) | 0... <u>100</u> |

Now specify what should be sent when the control is blocked.

On release, the control variable follows the rule again.

| | |
|--|---|
| When blocked, the control variable shall | <ul style="list-style-type: none"> • <u>not be sent</u> • send a specific value |
| Value (in %) (if a value is sent) | <u>0</u> ...100 |

In case of a common control variable for heating and cooling, 0 is always transmitted as a fixed value.

6.6. Summer Compensation

With the summer compensation the target value for the room temperature can automatically be adapted by cooling at higher outdoor temperatures. The objective is to prevent a too great a difference between indoor and outdoor temperature in order to keep the energy consumption low.

Activate the summer compensation.

| | |
|-------------------------|-----------------|
| Use summer compensation | <u>No</u> • Yes |
|-------------------------|-----------------|

Using the points 1 and 2, define the outdoor temperature range in which the target value for the indoor temperature is to be adapted linearly. Then, specify which indoor temperature target values are to be valid below point1 and above point 2.

Standard values according to DIN EN 60529

Point 1: External temperature = 20°, Target value = 20°C.

Point 2: External temperature = 32°, Target value = 26°C.

| | |
|--|------------------------|
| Characteristic curve description: | |
| External temperature point 1 (in 0.1°C increments) | 0 ... 500 ; <u>200</u> |
| Outdoor temperature point 2 (in 0.1°C increments) | 0 ... 500 ; <u>320</u> |

| | |
|---|------------------------|
| below point 1 the target value is (in 0.1°C) | 0 ... 500 ; <u>200</u> |
| above point 2 the target value is (in 0.1°C) | 0 ... 500 ; <u>260</u> |

Set the send pattern for the summer compensation.

| | |
|--------------------------------------|--|
| Send pattern | <ul style="list-style-type: none"> • periodically • <u>on change</u> • on change and periodically |
| on change of (if sent on change) | 0.1°C • <u>0.2°C</u> • 0.5°C • 1°C • 2°C • 5°C |
| Send cycle (if sent periodically) | 5 s ... 2 h; <u>1 min</u> |

If necessary, activate the block for the summer compensation and set what a 1 or 0 at the block input means and what happens in the event of a block.

| | |
|--|---|
| Use block | <u>No</u> • Yes |
| Analysis of the blocking object | <ul style="list-style-type: none"> • <u>At value 1: block</u> At value 0: release • At value 0: block At value 1: release |
| Blocking object value before first call | <u>0</u> • 1 |
| Action when locking | <ul style="list-style-type: none"> • <u>do not send</u> • Send value |
| Value (in increments of 0.1°C) (if a value is sent during blocking) | 0 ... 500; <u>200</u> |

6.7. Humidity Measurement

Select, whether a **malfunction object** is to be sent if the sensor is faulty.

| | |
|------------------------|-----------------|
| Use malfunction object | <u>No</u> • Yes |
|------------------------|-----------------|

Use **Offsets** to adjust the readings to be sent.

| | |
|-------------------|--------------------|
| Offset in 0.1% RH | -50...50; <u>0</u> |
|-------------------|--------------------|

The unit can calculate a **mixed value** from its own reading and an external value. Set the mixed value calculation if desired. If an external portion is used, all of the following settings (threshold values, etc.) are related to the overall reading.

| | |
|---|---|
| Use external measured value | <u>No</u> • Yes |
| Ext. Reading proportion of the total reading | 5% • 10% • ... • <u>50%</u> • ... • 100% |
| Sending pattern for internal and total measured value | <ul style="list-style-type: none"> • <u>never</u> • periodically • on change • on change and periodically |

| | |
|---|--|
| At and above change of (if sent on change) | 0.1% RH • 0.2% RH • 0.5% RH • <u>1.0% RH</u> • ... • 20.0% RH |
| Send cycle (if sent periodically) | 5 s • <u>10 s</u> • ... • 2 h |

The **minimum and maximum readings** can be saved and sent to the bus. Use the "Reset humidity min/max. value" objects to reset the values to the current readings. The values are not retained after a reset.

| | |
|-------------------------------|-----------------|
| Use minimum and maximum value | <u>No</u> • Yes |
|-------------------------------|-----------------|

6.8. Humidity threshold values

Activate the required air humidity threshold values. The menus for setting the threshold values are displayed.

| | |
|-----------------------------|-----------------|
| Use threshold value 1/2/3/4 | Yes • <u>No</u> |
|-----------------------------|-----------------|

6.8.1. Threshold value 1, 2, 3, 4

Threshold value

Set, in which cases **threshold values and delay times** received via objects are to be retained. The parameter is only taken into consideration if the setting via object is activated below. Please note that the setting "After power supply restoration and programming" should not be used for the initial start-up, as the factory settings are always used until the first communication (setting via objects is ignored).

| | |
|---|--|
| Maintain the threshold values and delays received via communication objects | <ul style="list-style-type: none"> • <u>never</u> • after power supply restoration • after power supply restoration and programming |
|---|--|

Set the threshold value directly in the application program using parameters, or define them via the bus using a communication object.

Threshold value setting using parameter:

Set the threshold values and hysteresis directly.

| | |
|-------------------------------|--|
| Threshold value setting using | Parameter • Communication objects |
| Threshold value in 0.1% RH | 1 ... 1000; <u>650</u> |

Threshold value setting using a communication object:

Define, how the threshold value is to be received from the bus. Basically, a new value can be received, or simply a command to increase or decrease.

During initial commissioning, a threshold value must be defined, which will be valid until the first communication with a new threshold value. For units which have already been taken into service, the last communicated threshold value can be used. Basically, a humidity range is specified in which the threshold value can be changed (object value limit).

A set threshold value will be retained until a new value or a change is transferred. The current value is saved, so that it is retained in the event of a power supply failure and will be available once the power supply is restored.

| | |
|---|---|
| Threshold value setting using | Parameter • Communication objects |
| Starting threshold value in 0.1% RH valid until first communication | 1 ... 1000; <u>650</u> |
| Object value limit (min.) in 0.1%RH | <u>1...1000</u> |
| Object value limit (max.) in 0.1%RH | <u>1...1000</u> |
| Type of threshold value change | <u>Absolute value</u> • Increase/decrease |
| Increment (upon increase/decrease change) | 0.1% RH • ... • <u>2.0% RH</u> • ... • 20.0% RH |

Set the **hysteresis** independent of the type of threshold value specification.

| | |
|--|------------------------|
| Hysteresis setting | in % • <u>absolute</u> |
| Hysteresis in 0.1% RH | 0...1000; <u>100</u> |
| Hysteresis in % (relative to the threshold value) | 0 ... 50; <u>20</u> |

Switching output

Set the behaviour of the switching output when a threshold value is exceeded/undercut. The output switching delay can be set using objects or directly as a parameter.

| | |
|--|--|
| When the following conditions apply, the output is (TV = Threshold value) | <ul style="list-style-type: none"> • <u>TV above = 1 TV - hyst. below = 0</u> • <u>TV above = 0 TV - hyst. below = 1</u> • <u>TV below = 1 TV + hyst. above = 0</u> • <u>TV below = 0 TV + hyst. above = 1</u> |
| Delays can be set via objects (in seconds) | <u>No</u> • Yes |
| Switching delay from 0 to 1 (If delay can be set via objects: valid until 1st communication) | <u>None</u> • 1 s • 2 s • 5 s • 10 s • ... • 2 h |
| Switching delay from 1 to 0 (If delay can be set via objects: valid until 1st communication) | <u>None</u> • 1 s • 2 s • 5 s • 10 s • ... • 2 h |

| | |
|--|--|
| Switching output sends | <ul style="list-style-type: none"> • <u>on change</u> • on change to 1 • on change to 0 • on change and periodically • on change to 1 and periodically • on change to 0 and periodically |
| Cycle <i>(is only sent if periodically is selected)</i> | <u>5 s</u> • 10 s • 30 s... • 2 h |

Block

The switching output can be blocked using an object.

| | |
|----------------------------|-----------------|
| Use switching output block | <u>No</u> • Yes |
|----------------------------|-----------------|

If the block is activated, define specifications here for the behaviour of the output when blocked.

| | |
|---|---|
| Analysis of the blocking object | <ul style="list-style-type: none"> • <u>At value 1: block At value 0: release</u> • At value 0: block At value 1: release |
| Blocking object value before first communication | <u>0</u> • 1 |
| Behaviour of the switching output | |
| On block | <ul style="list-style-type: none"> • <u>Do not send message</u> • send 0 • send 1 |
| On release <i>(with 2 seconds release delay)</i> | [Dependent on the "Switching output sends" setting] |

The behaviour of the switching output on release is dependent on the value of the parameter "Switching output sends" (see "Switching output")

| | |
|--|---|
| Switching output sends on change | <ul style="list-style-type: none"> • Do not send message • Send switching output status |
| Switching output sends on change to 1 | <ul style="list-style-type: none"> • Do not send message • if switching output = 1 → send 1 |
| Switching output sends on change to 0 | <ul style="list-style-type: none"> • Do not send message • if switching output = 0 → send 0 |
| Switching output sends on change and periodically | Send switching output status |
| Switching output sends on change to 1 and periodically | if switching output = 1 → send 1 |
| Switching output sends on change to 0 and periodically | if switching output = 0 → send 0 |

6.9. Humidity PI control

If you activate humidity control, you can use the following settings to define control type, setpoint values, and humidification and dehumidification.

| | |
|----------------------|-----------------|
| Use humidity control | <u>No</u> • Yes |
|----------------------|-----------------|

General control

Sensor Sewi KNX TH can be used to control one- or two-level dehumidification or combined humidification/dehumidification.

| | |
|-----------------|--|
| Type of control | <ul style="list-style-type: none"> • <u>One-level dehumidification</u> • Two-level dehumidification • Humidification and dehumidification |
|-----------------|--|

Configure a block for the humidity control using the blocking object.

| | |
|--|---|
| Behaviour of the blocking object with value | <ul style="list-style-type: none"> • <u>1 = Block 0 = release</u> • 0 = block 1 = release |
| Blocking object value before first communication | 0 • <u>1</u> |

Specify when the current control variables are to be sent to the bus. Periodic sending is safer, in case a message does not reach a recipient. You may also set up periodic monitoring using an actuator with this setting.

| | |
|--|--|
| Send control variable | <ul style="list-style-type: none"> • <u>on change</u> • on change and periodically |
| Send cycle (is only sent if "periodically" is selected) | 5 s • ... • <u>5 min</u> • ... • 2 h |

The status object shows the current status of the output variable (0 = OFF, >0 = ON) and can for example be used for visualisation.

| | |
|--|--|
| Send status object(s) | <ul style="list-style-type: none"> • <u>on change</u> • on change to 1 • on change to 0 • on change and periodically • on change to 1 and periodically • on change to 0 and periodically |
| Send cycle (is only sent if "periodically" is selected) | 5 s • ... • <u>5 min</u> • ... • 2 h |

Controller setpoint

Set, in which cases **setpoint values** received via object are to be retained. Please note that the setting "After power supply restoration and programming" should not be used

for the initial start-up, as the factory settings are always used until the first communication (setting via objects is ignored).

| | |
|--|--|
| Maintain the | |
| setpoint value received via communication object | <ul style="list-style-type: none"> • <u>never</u> • after power supply restoration • after power supply restoration and programming |
| | |

During initial commissioning, a **setpoint value** must be defined which is valid until the first communication of a new setpoint value. For units which have already been taken into service, the last communicated setpoint value can be used. Basically, an air humidity range is specified in which the setpoint value can be changed (**object value limit**).

Enter, how the setpoint value will be received from the bus. Basically, a new value can be received, or simply a command to increase or decrease.

A set setpoint value will be retained until a new value or a change is transferred. The current value is saved, so that it is retained in the event of a power supply failure and will be available once the power supply is restored.

| | |
|--|---|
| Start setpoint in % valid until first communication (not upon saving the setpoint value after programming) | 0 ... 100; <u>50</u> |
| Object value limit (min.) in % | 0...100; <u>30</u> |
| Object value limit (max.) in % | 0...100; <u>70</u> |
| Type of setpoint value change | <u>Absolute value</u> • Increase/decrease |
| Increment (upon increase/decrease change) | 1% • <u>2%</u> • 3% • 5% • 10% |

In "Humidification and dehumidification" control mode, a dead zone is specified so that a direct changeover switching between humidification and dehumidification can be avoided.

| | |
|---|-------------------|
| Dead zone between humidification and dehumidification in % (only if both humidification and dehumidification are used) | 0...50; <u>10</u> |
|---|-------------------|

Humidification starts, when the relative air humidity is lower or equal to the setpoint value - dead zone value.

Dehumidification and/or humidification

Depending on the control mode, settings sections for humidification and dehumidification appear (level 1/2).

For dual-level dehumidification, the setpoint value difference between the two levels must be defined, i.e. the setpoint value which, when exceeded, triggers the switch to the 2nd level.

| | |
|--|-------------------|
| Target value difference between level 1 and 2 in % (for level 2 only) | 0...50; <u>10</u> |
|--|-------------------|

Determine the deviation from the setpoint value at which the maximum variable value is reached, i.e. the point at which maximum output is used.

The reset time shows how quickly the controller responds to deviations from the setpoint value. In case of a short reset time, the control responds with a fast increase of the control variable. In case of a long reset time, the control responds somewhat less urgently and needs longer until the necessary control variable for the setpoint value deviation is reached.

You should set the time appropriate for the humidification/dehumidification system at this point (note manufacturer instructions).

| | |
|--|-------------------|
| Maximum control variable is reached at target/actual difference of % | 1...50; <u>5</u> |
| Reset time in minutes | 1...255; <u>3</u> |

Now specify, what should be sent when the control is blocked.

On release, the control variable follows the rule again.

| | |
|--|---|
| When blocked, the control variable shall | <ul style="list-style-type: none"> • <u>not be sent</u> • send a specific value |
| Value in % (if a value is sent) | <u>0</u> ...100 |

6.10. Dewpoint measurement

The **Sensor Sewi KNX TH** calculates the dewpoint temperature and can output the value to the bus.

| | |
|---|---|
| Sending pattern | <ul style="list-style-type: none"> • <u>never</u> • periodically • on change • on change and periodically |
| At and above change of (if sent on change) | 0.1°C • 0.2°C • <u>0.5°C</u> • 1.0°C • 2.0°C • 5.0°C |
| Send cycle (if sent periodically) | 5 s • <u>10 s</u> • 30 s • 1 min • ... • 2 h |

Activate the monitoring of the coolant temperature if required. The menus for setting the monitoring are displayed.

| | |
|---|-----------------|
| Use monitoring of the coolant temperature | <u>No</u> • Yes |
|---|-----------------|

6.10.1. Cooling medium temp. monitoring

A threshold value can be set for the temperature of the coolant, which is based on the current dewpoint temperature (offset/deviation). The switching output of the coolant temperature monitoring system can provide a warning prior to any build-up of condensation in the system, and/or activate appropriate countermeasures.

Threshold value

Threshold value = dewpoint temperature + offset

Set, in which cases **offset** received via object is to be retained. Please note that the setting "After power supply restoration and programming" should not be used for the initial start-up, as the factory settings are always used until the first communication (setting via objects is ignored).

| | |
|---|--|
| Maintain the offset received via communication object | <ul style="list-style-type: none"> • <u>never</u> • after power supply restoration • after power supply restoration and programming |
| . | |

During initial commissioning, an **offset** must be defined which is valid until the first communication of a new offset. For units which have already been taken into service, the last communicated offset can be used.

A set offset will be retained until a new value or a change is transferred. The current value is saved, so that it is retained in the event of a power supply failure and will be available once the power supply is restored.

| | |
|--|---|
| Start offset in °C valid until first communication | 0...200; <u>30</u> |
| Increment for offset change | <u>0.1°C</u> • 0.2°C • 0.3°C • 0.4°C • 0.5°C • 1°C • 2°C • 3°C • 4°C • 5°C |
| Hysteresis setting | in % • <u>absolute</u> |
| Hysteresis of the threshold value in % (for setting in %) | 0 ... 50; <u>20</u> |
| Threshold value hysteresis in 0.1°C increments (at absolute setting) | 0 ... 1000; <u>50</u> |
| Threshold value sends | <ul style="list-style-type: none"> • <u>never</u> • periodically • on change • on change and periodically |
| At and above change of (if sent on change) | <u>0.1°C</u> • 0.2°C • 0.5°C • 1.0°C • 2.0°C • 5.0°C |
| Send cycle (if sent periodically) | 5 s • <u>10 s</u> • 30 s • 1 min • ... • 2 h |

Switching output

The output switching delay can be set using objects or directly as a parameter.

| | |
|--|--|
| When the following conditions apply, the output is (TV = Threshold value) | <ul style="list-style-type: none"> • TV above = 1 TV - hyst. below = 0 • TV above = 0 TV - hyst. below = 1 • <u>TV below = 1 TV + hyst. above = 0</u> • TV below = 0 TV + hyst. above = 1 |
| Delays can be set via objects (in seconds) | <u>No</u> • Yes |
| Switching delay from 0 to 1 for setting via objects: valid until 1st communication | <u>None</u> • 1 s • 2 s • 5 s • 10 s • ... • 2 h |
| Switching delay from 1 to 0 for setting via objects: valid until 1st communication | <u>None</u> • 1 s • 2 s • 5 s • 10 s • ... • 2 h |
| Switching output sends | <ul style="list-style-type: none"> • <u>on change</u> • on change to 1 • on change to 0 • on change and periodically • on change to 1 and periodically • on change to 0 and periodically |
| Send cycle (is only sent if periodically is selected) | <u>5 s</u> • 10 s • 30 s... • 2 h |

Blocking

The switching output can be blocked using an object. Define specifications here for the behaviour of the output when blocked.

| | |
|--|--|
| Use switching output block | <u>No</u> • Yes |
| Analysis of the blocking object | <ul style="list-style-type: none"> • At value 1: block At value 0: release • At value 0: block At value 1: release |
| Blocking object value before first communication | <u>0</u> • 1 |
| Behaviour of the switching output | |
| On block | <ul style="list-style-type: none"> • <u>Do not send message</u> • send 0 • send 1 |
| On release (with 2 seconds release delay) | [Dependent on the "Switching output sends" setting] |

The behaviour of the switching output on release is dependent on the value of the parameter "Switching output sends" (see "Switching output")

| | |
|---------------------------------------|---|
| Switching output sends on change | <ul style="list-style-type: none"> • Do not send message • Send switching output status |
| Switching output sends on change to 1 | <ul style="list-style-type: none"> • Do not send message • if switching output = 1 → send 1 |
| Switching output sends on change to 0 | <ul style="list-style-type: none"> • Do not send message • if switching output = 0 → send 0 |

| | |
|--|----------------------------------|
| Switching output sends on change and periodically | Send switching output status |
| Switching output sends on change to 1 and periodically | if switching output = 1 → send 1 |
| Switching output sends on change to 0 and periodically | if switching output = 0 → send 0 |

6.11. Absolute humidity

The absolute air humidity value is detected by the **Sewi KNX TH** and can be output to the bus.

| | |
|---|---|
| Use absolute humidity | <u>No</u> • Yes |
| Sending pattern | <ul style="list-style-type: none"> • <u>never</u> • periodically • on change • on change and periodically |
| At and above change of (if sent on change) | 0.1 g • 0.2 g • <u>0.5 g</u> • 1.0 g • 2.0 g • 5.0 g |
| Send cycle (if sent periodically) | 5 s • <u>10 s</u> • 30 s... • 2 h |

6.12. Comfort field

The **Sensor Sewi KNX TH** can send a message to the bus if the limits of the comfort field are exceeded. In this way, it is for example possible to monitor compliance with DIN 1946 (standard values) or even to define your own comfort field.

| | |
|-------------------|-----------------|
| Use comfort field | <u>No</u> • Yes |
|-------------------|-----------------|

Specify the **sending pattern**, a **Text** for comfortable and uncomfortable and the **Object value**.

| | |
|--------------------------------------|--|
| Sending pattern | <ul style="list-style-type: none"> • <u>never</u> • periodically • on change • on change and periodically |
| Text for comfortable | [Free text max. 14 chars.] |
| Text for uncomfortable | [Free text max. 14 chars.] |
| Object value is at | <ul style="list-style-type: none"> • <u>comfortable = 1</u> <u>uncomfortable = 0</u> • comfortable = 0 uncomfortable = 1 |
| Send cycle (if sent periodically) | <u>5 s</u> • <u>10 s</u> • 30 s... • 2 h |

Define the comfort field by specifying the minimum and maximum values for temperature and humidity. The specified standard values comply with DIN 1946

| | |
|--|------------------------|
| Maximum temperature in °C (Standard 26°C) | 25 ... 40; <u>26</u> |
| Minimum temperature in °C (Standard 20°C) | 10 ... 21; <u>20</u> |
| Maximum relative humidity in % (Standard 65%) | 52 ... 90; <u>65</u> |
| Minimum relative humidity in % (Standard 30%) | 10 ... 43; <u>30</u> |
| Maximum absolute humidity in 0.1 g/kg (Standard 115 g/kg) | 50 ... 200; <u>115</u> |

Temperature hysteresis: 1°C

Relative humidity hysteresis: 2% RH

Absolute humidity hysteresis: 2 g/kg

6.13. Variable comparator

The integrated variable comparators can output maximum, minimum and average values.

| | |
|------------------------|-----------------|
| Use comparator 1/2/3/4 | <u>No</u> • Yes |
|------------------------|-----------------|

6.13.1. Control variable comparator 1/2/3/4

Determine what the control variable comparator should output, and activate the input objects to be used. Transmission patterns and blocks can also be set.

| | |
|---|---|
| Output delivers | <ul style="list-style-type: none"> • Maximum value • Minimum value • <u>Average value</u> |
| Use input 1 / 2 / 3 / 4 / 5 | No • Yes |
| Output sends | <ul style="list-style-type: none"> • <u>on change of output</u> • on change of output and periodically • when receiving an input object • when receiving an input object and periodically |
| Send cycle (if sent periodically) | 5 s • 10 s • 30 s • ... • <u>5 min</u> • ... • 2 h |
| At and above change of (if sent on change) | 1% • 2% • 5% • <u>10%</u> • 20% • 25% • 50% |
| Analysis of the blocking object | <ul style="list-style-type: none"> • <u>at value 1: block at value 0: release</u> • at value 0: block at value 1: release |
| Blocking object value before 1st communication | 0 • 1 |
| Behaviour of the switching output | |

| | |
|---|--|
| On block | <ul style="list-style-type: none"> • <u>do not send message</u> • <u>Send value</u> |
| Sent value in % | 0 ... 100 |
| output sends on release (with 2 seconds release delay) | <ul style="list-style-type: none"> • <u>the current value</u> • the current value after receipt of an object |

6.14. Computer

Activate the multi-functional computer, with which the input data can be changed by calculation, querying a condition or converting the data point type. The menus for the further setting of the computer are then displayed.

| | |
|--------------------------|-----------------|
| Computer 1/2/3/4/5/6/7/8 | <u>No</u> • Yes |
|--------------------------|-----------------|

6.14.1. Computer 1-8

Set, in which cases input values received are to be kept per object. Please note that the setting "After power restoration and programming" should not be used for the initial start-up, as the factory settings are always used until the first call (setting via objects is ignored).

| | |
|--|---|
| Maintain the input values received via communication objects | <ul style="list-style-type: none"> • never • after power supply restoration • after power supply restoration and programming |
|--|---|

Select the function set the input mode and starting values for input 1 and input 2.

| | |
|--|---|
| Function (I = Input) | <ul style="list-style-type: none"> • Prerequisite: $E1 = E2$ • Prerequisite: $E1 > E2$ • Prerequisite: $E1 \geq E2$ • Prerequisite: $E1 < E2$ • Prerequisite: $E1 \leq E2$ • Prerequisite: $E1 - E2 \geq E3$ • Prerequisite: $E2 - E1 \geq E3$ • Prerequisite: $E1 - E2 \text{ amount} \geq E3$ • Calculation: $E1 + E2$ • Calculation: $E1 - E2$ • Calculation: $E2 - E1$ • Calculation: $E1 - E2 \text{ Amount}$ • Calculation: Output 1 = $E1 \times X + Y$ Output 2 = $E2 \times X + Y$ • Transformation: General |
| Tolerance for comparison (in the case of prerequisite $E1 = E2$) | <u>0</u> ... 4,294,967,295 |

| | |
|-----------------------------|---|
| Input type | [Selection options depending on the function] <ul style="list-style-type: none"> • 1 bit • 1 byte (0...255) • 1 byte (0%...100%) • 1 byte (0°...360°) • 2 byte counter without math. symbol • 2 byte counter with math. symbol • 2 byte floating point • 4 byte counter without math. symbol • 4 byte counter with math. symbol • 4 byte floating point |
| Starting value E1 / E2 / E3 | [Input range depending on the type of input] |

Prerequisites

When querying the prerequisites set the output type and output values at different statuses:

| | |
|---|---|
| Output type | <ul style="list-style-type: none"> • 1 bit • 1 byte (0...255) • 1 byte (0%...100%) • 1 byte (0°...360°) • 2 byte counter without math. symbol • 2 byte counter with math. symbol • 2 byte floating point • 4 byte counter without math. symbol • 4 byte counter with math. symbol • 4 byte floating point |
| Output value (if applicable output value A1 / A2) | |
| if the condition is met | <u>0</u> [Input range depending on the type of output] |
| if the condition is not met | <u>0</u> [Input range depending on the type of output] |
| if the monitoring time period is exceeded | <u>0</u> [Input range depending on the type of output] |
| if blocked | <u>0</u> [Input range depending on the type of output] |

Set the output send pattern.

| | |
|---|--|
| Output sends | <ul style="list-style-type: none"> • <u>on change</u> • on change and after reset • on change and periodically • when receiving an input object • when receiving an input object and periodically |
| Type of change (is only sent if "on change" is selected) | <ul style="list-style-type: none"> • <u>on each change</u> • on change to condition met • on change to condition not met |
| Send cycle (if sent periodically) | 5 s ... 2 h; <u>10 s</u> |

Set the text to be displayed for conditions met / not met.

| | |
|----------------------------------|----------------------------|
| Text if the condition is met | [Free text max. 14 chars.] |
| Text if the condition is not met | [Free text max. 14 chars.] |

If applicable set the send delays.

| | |
|---|-------------------------------|
| Send delay in the event of change to the condition is met | <u>none</u> • 1 s • ... • 2 h |
| Send delay in the event of change to the condition is not met | <u>none</u> • 1 s • ... • 2 h |

Calculations and transformation

For calculations and transformations set the output values to the various conditions:

| | |
|---|--|
| Output value (if applicable A1 / A2) | |
| if the monitoring time period is exceeded | <u>0</u> [Input range depending on the type of output] |
| if blocked | <u>0</u> [Input range depending on the type of output] |

Set the output send pattern.

| | |
|--|--|
| Output sends | <ul style="list-style-type: none"> • <u>on change</u> • on change and after reset • on change and periodically • when receiving an input object • when receiving an input object and periodically |
| on change of (only if calculations are transmitted for changes) | 1 ... [Input range depending on the type of input] |
| Send cycle (if sent periodically) | 5 s ... 2 h; <u>10 s</u> |

For **Calculations of the form output 1 = E1 × X + Y | output 2 = E2 × X + Y** define the variables X and Y. The variables can have a positive or negative sign, 9 digits before and 9 digits after the decimal point.

| | |
|---|--------------------------|
| Formula for output A1: $A1 = E1 \times X + Y$ | |
| X | <u>1.00</u> [free input] |
| Y | <u>0.00</u> [free input] |
| Formula for output A2: $A2 = E2 \times X + Y$ | |
| X | <u>1.00</u> [free input] |
| Y | <u>0.00</u> [free input] |

Further settings for all formulas

If necessary, activate the input monitoring. Set which inputs are to be monitored, at which intervals the inputs are to be monitored and what value the "monitoring status" should have, if the monitoring period is exceeded without feedback.

| | |
|---|--|
| Use input monitoring | <u>No</u> • Yes |
| Monitoring of | <ul style="list-style-type: none"> • <u>E1</u> • <u>E2</u> • <u>E3</u> • <u>E1 and E2</u> • <u>E1 and E3</u> • <u>E2 and E3</u> • <u>E1 and E2 and E3</u> [depending on the function] |
| Monitoring period | 5 s • ... • 2 h; <u>1 min</u> |
| Value of the object "monitoring status" if period is exceeded | 0 • <u>1</u> |

If necessary, activate the computer block and set what a 1 or 0 at the block entry means and what happens in the event of a block.

| | |
|---------------------------------|--|
| Use block | <u>No</u> • Yes |
| Analysis of the blocking object | <ul style="list-style-type: none"> • <u>At value 1: block At value 0: release</u> • <u>At value 0: block At value 1: release</u> |
| Value before first call | <u>0</u> • 1 |
| Output pattern | <ul style="list-style-type: none"> • <u>do not send anything</u> • <u>send value</u> |
| On block | |
| On release | <ul style="list-style-type: none"> • <u>as send pattern [see above]</u> • <u>send current value immediately</u> |

6.15. Logic

The device has 16 logic inputs, eight AND and eight OR logic gates.

Activate the logic inputs and assign object values up to first call.

| | |
|------------------|-----------------|
| Use logic inputs | Yes • <u>No</u> |
|------------------|-----------------|

| Object value prior to first call for: | |
|---------------------------------------|--------------|
| - Logic input 1 | <u>0</u> • 1 |
| - Logic input ... | <u>0</u> • 1 |
| - Logic input 16 | <u>0</u> • 1 |

Activate the required logic outputs.

AND logic

| | |
|---------------|----------------------------|
| AND logic 1 | <u>not active</u> • active |
| AND logic ... | <u>not active</u> • active |
| AND logic 8 | <u>not active</u> • active |

OR logic

| | |
|--------------|----------------------------|
| OR logic 1 | <u>not active</u> • active |
| OR logic ... | <u>not active</u> • active |
| OR logic 8 | <u>not active</u> • active |

6.15.1. AND logic 1-8 and OR logic outputs 1-8

The same setting options are available for AND and OR logic.

Each logic output may transmit one 1 bit or two 8 bit objects. Determine what the output should send if logic = 1 and = 0.

| | |
|-------------------------|--|
| 1. / 2. / 3. / 4. Input | <ul style="list-style-type: none"> • <u>do not use</u> - Logic inputs 1...16 - Logic inputs 1...16 inverted • all switching events that the device provides (see <i>Connection inputs of the AND/OR logic</i>) |
| Output type | <ul style="list-style-type: none"> • <u>a 1-Bit-object</u> • two 8-bit objects |

If the **output type is a 1-bit object**, set the output values for the various conditions.

| | |
|---|--------------|
| Output value if logic = 1 | <u>1</u> • 0 |
| Output value if logic = 0 | 1 • <u>0</u> |
| Output value If block is active | 1 • <u>0</u> |
| Output value if monitoring period is exceeded | 1 • <u>0</u> |

If the **output type is two 8-bit objects**, set the type of object and the output values for the various conditions.

| | |
|--|---|
| Object type | <ul style="list-style-type: none"> • <u>Value (0...255)</u> • Percent (0...100%) • Angle (0...360°) • Scene call-up (0...127) |
| Output value object A if logic = 1 | 0 ... 255 / 100% / 360° / 127; <u>1</u> |
| Output value object B if logic = 1 | 0 ... 255 / 100% / 360° / 127; <u>1</u> |
| Output value object A if logic = 0 | 0 ... 255 / 100% / 360° / 127; <u>0</u> |
| Output value object B if logic = 0 | 0 ... 255 / 100% / 360° / 127; <u>0</u> |
| Output value object A if block is active | 0 ... 255 / 100% / 360° / 127; <u>0</u> |
| Output value object B if block is active | 0 ... 255 / 100% / 360° / 127; <u>0</u> |
| Output value object A if monitoring period is exceeded | 0 ... 255 / 100% / 360° / 127; <u>0</u> |
| Output value object B if monitoring period is exceeded | 0 ... 255 / 100% / 360° / 127; <u>0</u> |

Set the output send pattern.

| | |
|--------------------------------------|---|
| Send pattern | <ul style="list-style-type: none"> • <u>on change of logic</u> • on change of logic to 1 • on change of logic to 0 • on change of logic and periodically • on change of logic to 1 and periodically • on change of logic to 0 and periodically • on change of logic+object receipt • on change of logic+object receipt and periodically |
| Send cycle (if sent periodically) | 5 s • <u>10 s</u> • ... • 2 h |

Block

If necessary, activate the block for the logic output and set what a 1 or 0 at the block input means and what happens in the event of a block.

| | |
|---|---|
| Use block | <u>No</u> • Yes |
| Analysis of the blocking object | <ul style="list-style-type: none"> • <u>At value 1: block At value 0: release</u> • At value 0: block At value 1: release |
| Blocking object value before first call | <u>0</u> • 1 |

| | |
|--|--|
| Output pattern On block | <ul style="list-style-type: none"> • <u>Do not send message</u> • <u>Transmit block value</u> [see above, Output value if blocking active] |
| On release (with 2 seconds release delay) | [send value for current logic status] |

Monitoring

If necessary, activate the input monitoring. Set which inputs are to be monitored, at which intervals the inputs are to be monitored and what value the "monitoring status" should have, if the monitoring period is exceeded without a feedback being given.

| | |
|---|---|
| Use input monitoring | <u>No</u> • Yes |
| Input monitoring | <ul style="list-style-type: none"> • 1 • 2 • 3 • 4 • 1 + 2 • 1 + 3 • 1 + 4 • 2 + 3 • 2 + 4 • 3 + 4 • 1 + 2 + 3 • 1 + 2 + 4 • 1 + 3 + 4 • 2 + 3 + 4 • <u>1 + 2 + 3 + 4</u> |
| Monitoring period | 5 s • ... • 2 h; <u>1 min</u> |
| Output behaviour on exceeding the monitoring time | <ul style="list-style-type: none"> • <u>Do not send message</u> • <u>Send value exceeding</u> [= value of the parameter "monitoring period"] |

6.15.2.AND logic connection inputs

Do not use

Logic input 1

Logic input 1 inverted

Logic input 2

Logic input 2 inverted

Logic input 3

Logic input 3 inverted

Logic input 4

Logic input 4 inverted

Logic input 5

Logic input 5 inverted

Logic input 6

Logic input 6 inverted

Logic input 7

Logic input 7 inverted

Logic input 8

Logic input 8 inverted

Logic input 9

Logic input 9 inverted

Logic input 10

Logic input 10 inverted

Logic input 11

Logic input 11 inverted
Logic input 12
Logic input 12 inverted
Logic input 13
Logic input 13 inverted
Logic input 14
Logic input 14 inverted
Logic input 15
Logic input 15 inverted
Logic input 16
Logic input 16 inverted
Temperature sensor malfunction ON
Temperature sensor malfunction OFF
Humidity sensor malfunction ON
Humidity sensor malfunction OFF
Switching output 1 Temperature
Switching output 1 Temperature inverted
Switching output 2 Temperature
Switching output 2 Temperature inverted
Switching output 3 Temperature
Switching output 3 Temperature inverted
Switching output 4 Temperature
Switching output 4 Temperature inverted
Switching output 1 Humidity
Switching output 1 Humidity inverted
Switching output 2 Humidity
Switching output 2 Humidity inverted
Switching output 3 Humidity
Switching output 3 Humidity inverted
Switching output 4 Humidity
Switching output 4 Humidity inverted
Switching output coolant temperature
Switching output coolant temperature inverted
Ambient climate is comfortable
Ambient climate is uncomfortable
Comfort temperature controller active
Comfort temperature controller inactive
Standby temperature controller active
Standby temperature controller inactive
Eco temperature controller active
Eco temperature controller inactive
Frost protection temperature controller active
Frost protection temperature controller inactive
Heating 1 temperature controller active
Heating 1 temperature controller inactive
Heating 2 temperature controller active
Heating 2 temperature controller inactive
Cooling 1 temperature controller active

Cooling 1 temperature controller inactive
Cooling 2 temperature controller active
Cooling 2 temperature controller inactive
Humidity controller dehumidification 1 active
Humidity controller dehumidification 1 inactive
Humidity controller dehumidification 2 active
Humidity controller dehumidification 2 inactive
Humidity controller humidification active
Humidity controller humidification inactive

6.15.3. Connection inputs of the OR logic

The OR logic connection inputs correspond to those of the AND logic. In addition, the following inputs are available for the OR logic:

Switching output AND logic 1
Switching output AND logic 1 inverted
Switching output AND logic 2
Switching output AND logic 2 inverted
Switching output AND logic 3
Switching output AND logic 3 inverted
Switching output AND logic 4
Switching output AND logic 4 inverted
Switching output AND logic 5
Switching output AND logic 5 inverted
Switching output AND logic 6
Switching output AND logic 6 inverted
Switching output AND logic 7
Switching output AND logic 7 inverted
Switching output AND logic 8
Switching output AND logic 8 inverted



Elsner Elektronik GmbH Control and Automation Engineering

Sohlegrund 16
75395 Ostelsheim
Germany

Phone +49 (0) 70 33 / 30 945-0 info@elsner-elektronik.de
Fax +49 (0) 70 33 / 30 945-20 www.elsner-elektronik.de

Technical support: +49 (0) 70 33 / 30 945-250